

LEAPFROG CONFIDENTIAL & PROPRIETARY

SCHAWKI!	<input type="checkbox"/> Package <input checked="" type="checkbox"/> Parent Guide <input type="checkbox"/> Other		<input checked="" type="checkbox"/> Layout <input type="checkbox"/> Color Match	
	File: 19156_Scout_PGrevC_m3.indd			
Art#: 810-19500-C		Part#: 605-11476-C		Die line#: N/A
Flat: 10"w x 7"h		Trim: 10"w x 7"h		Finished: 5"w x 7"h
Fonts: Gillsans-BoldCondensed, Gillsans-Condensed, Whitney-Black, Whitney-Bold, Whitney-Bold, Whitney-BoldItalic, Whitney-Book, Whitney-BookItalic, Whitney-Semibold, Whitney-Semibold, Whitney-SemiboldItalic, WhitneyCnd-Bold, WhitneyCnd-Book, WhitneyCondensed-Book, WhitneyCondensed-Semibold		<div style="display: flex; justify-content: space-around;"> <div style="background-color: cyan; padding: 5px;">C</div> <div style="background-color: magenta; padding: 5px;">M</div> <div style="background-color: yellow; padding: 5px;">Y</div> <div style="background-color: black; padding: 5px;">K</div> </div>		rev C 3
File Size: 100%	Output Size: 100%	Date: 16JUL09	AD: JL PA: KD	

Notes: Die line is FPO. Please refer to Agile/BOM for current version.
 Please refer to Agile DOC-160 for Parent Guide Fold Schematic and/or paper substrate for non-packaging items.

History: Rev C1: Correction carried out as per annoated PDF & Slug updated; DN; 25JUN09
 Rev C2: Correction carried out as per OLP & Slug updated; KD; 29JUN09
 Rev C3: Correction carried out as per supplied annoated PDF & Slug updated; KD; 16JUL09

To be there every step of the way.

It's a hope you have for your child and one that LeapFrog shares. As children play with My Pal Scout or Violet, friendly activities encourage them to talk and sing along, developing language skills and starting them on the path to literacy. Get more ideas to support your child's learning at leapfrog.com/learningpath

I can learn your name!



My Pal Scout or Violet • 6-36 months



AlphaPet Explorer* • 2+ years



Fridge Phonics™
Magnetic Alphabet* • 2+ years



Tag™
Reading System* • 4-8 years



Tag™ Junior
Book Pal* • 2-4 years

*Products sold separately. All products may not be available in all countries. Actual products may vary.



Quick Connect Guide and Parent Instructions



My Pal Scout

My Pal Violet



Learning with a personal touch!



 
See your child's play and learning online exclusively with the Learning Path!

This guide contains important information. Please keep it for future reference.


6-36 months

QUICK CONNECTION GUIDE

Three simple steps to set up your custom puppy!

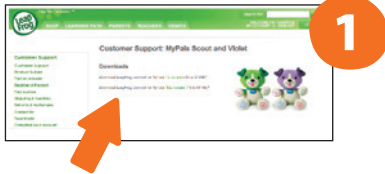

 Go to leapfrog.com/MyPals and click the "Download LEAPFROG® Connect for My Pals" link to install the LEAPFROG® Connect Application for My Pal Scout and Violet.

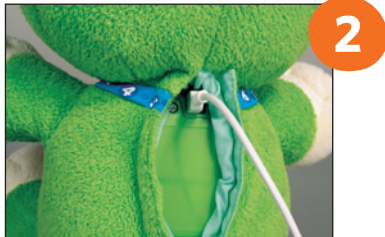


Plug the included USB cable into Scout or Violet and then connect the puppy to your computer. Connection will launch the application. The USB port is in the upper right-hand corner of the battery box located in the back of the puppy.



Create or sign in to your LEAPFROG Account. Follow the instructions to set up your child's player profile. Go to the My Pal Scout and Violet Home page and click on the "Get Started" button.

 DETAILED CONNECTION GUIDE: GETTING STARTED

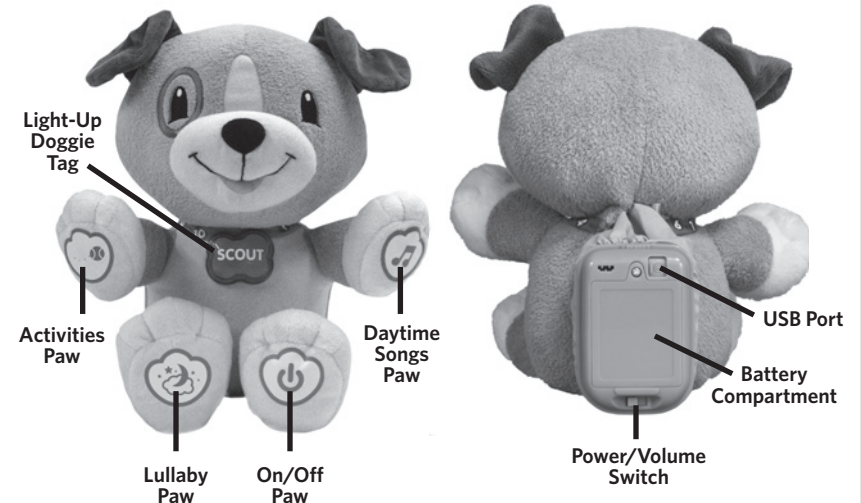

CUSTOMIZING/CUSTOMISING YOUR PUPPY PAL!

Before you play with or connect your puppy, remove the plastic pull tab from the back of My Pal Scout or Violet and discard.

1. Install the LEAPFROG® Connect Application

The LEAPFROG Connect Application enables you to download the spelling and pronunciation of your child's name, your child's favorite/favourite food, animal and color/colour, and melodies that you know and love to your child's puppy pal! You can also create a personal LEAPFROG® Learning Path for your child online, letting you see the skills your child is exploring, get learning ideas that are tailored to your child and more.

Note: If you already have the LEAPFROG Connect Application installed for another LEAPFROG Connected device, you will still need to download and install the application to personalize/personalise My Pal Scout or Violet.

To install:

1. Open an Internet browser on your computer and go to leapfrog.com/MyPals.
2. Click the link to download the My Pal Scout or Violet LEAPFROG Connect Application to your PC or Mac® computer.
3. Run the installation program. On-screen instructions will guide you through the full installation process.

II. Download personalized/personalised content and choose the music!

Once you have installed the LEAPFROG® Connect Application, you can download personalized/personalised audio for My Pal Scout or Violet quickly and easily:

1. Open the Velcro® fastening on the back of the puppy to view the battery box and USB port.
Note: The Power/Volume switch must be in the ON position in order to connect to the computer.
2. Slide the small door covering the USB port to the side and plug the included USB cord into the port (above the battery door).
3. Connection will automatically launch the My Pal Scout and Violet view of the LEAPFROG Connect Application, but if it does not launch simply find the LEAPFROG Connect Application on your computer and open it. Make sure you are connected to the Internet and double-click the icon.
4. Select the items you would like to personalize/personalise from the menu on the left-hand side of the screen.



- **My Name:** Scout or Violet can express love and friendship to your child by name. Select your child's name from a list of thousands in the My Name tab. Scout or Violet will also spell your child's name and encourage your child to spell it, too!
 - **My Picks:** You can personalize/personalise the learning by teaching Scout or Violet your child's favorite/favourite animal, food and color/colour.
 - **My Music:** My Pal Scout or Violet can store up to five lullaby melodies and five daytime melodies to play for your child. Choose your favorites/favourites from a list of 30+ tunes to download to Scout or Violet. You can change them anytime!
 - **My Printables:** Print a Puppy Adoption Certificate for your child, plus lyrics and coloring/colouring pages featuring your puppy friends!
5. Once file saving is complete, click Eject on screen. The LEAPFROG Connect Application will notify you when it's safe to remove the USB cable.
Note: My Pal Scout or Violet will not function when the USB cable is plugged into the USB port.



 
If you can't find your child's name press the Lightbulb for some search tips.

6. To begin playing, turn on My Pal Scout or Violet by sliding the Power/Volume switch located on the battery box inside the puppy to the High or Low Volume position. Close the Velcro over the battery box. Then touch any paw.

The LEAPFROG® Learning Path

Now you can get personalized/personalised insights into what and how your child is learning while playing with LEAPFROG® toys. To get started with the LEAPFROG Learning Path, follow the instructions on the LEAPFROG Connect home page to create a LEAPFROG Account. With the Learning Path, you can:

- See the skills your child is exploring during play
- Receive emails with learning tips that are tailored to your child
- Find learning toys that match your child's passions and interests
- Explore creative ideas to enrich and inspire learning

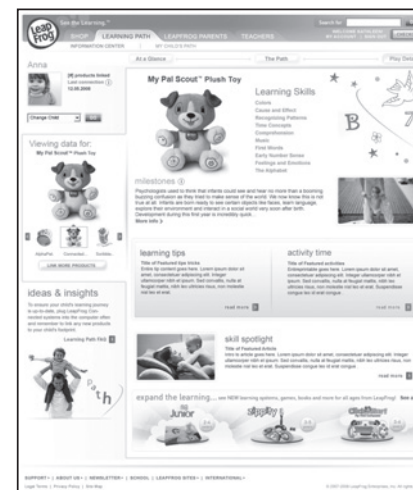

HOW TO PLAY

Learning Modes

My Pal Scout or Violet has four active paws.



Daytime Songs Paw

Press the Daytime Songs paw to play different learning songs. These active, upbeat songs are interspersed with melodies that parents can select and download when they connect Scout or Violet to the computer.



Activities Paw

Press the Activities paw to play and learn with Scout or Violet. The puppy will ask about your child's favorite/favourite things, count hiccups, pretend to be other animals and talk about feelings.



Lullabies Paw

The Lullabies paw plays soothing lullaby music to transition from a day of active learning to naptime or nighttime. Parents can choose and change the songs found in the Lullabies paw by downloading any mix of up to five melodies from the lullaby music list found on the My Pal Scout and Violet LEAPFROG® Connect Application.

- Squeeze once to hear two minutes of music.
- Squeeze a second time to hear five minutes of music.
- Squeeze a third time to hear ten minutes of music.



On/Off Paw

Press the On/Off paw to turn off My Pal Scout or Violet. Press any paw to resume play mode.

Note: My Pal Scout or Violet will automatically turn off after a period of inactivity. You can wake up the puppy again by pressing any paw button. To turn Scout or Violet off so that pressing paws will not resume play, use the Power/Volume switch located on the battery box.

INSTRUCTIONS FOR CARE AND USE

Caring for My Pal Scout or Violet

For indoor, dry-location use only. Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the product. Never try to dismantle it.

Cleaning My Pal Scout or Violet

Disconnect USB cable from puppy before cleaning. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the product in water. Allow to dry before reuse.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Open the battery door with a Phillips screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Informations sur les piles

Les piles incluses sont destinées à la démonstration en magasin et doivent être remplacées pour améliorer les performances du produit à la maison. Nécessite 3 piles alcalines AA (aussi appelées LR6 dans certains pays).

Retrait et installation des piles

1. Ouvrir le compartiment des piles à l'aide d'un tournevis.
2. S'il y a des piles usagées ou à plat, les retirer du compartiment en tirant sur l'une des extrémités de chaque pile.
3. Installer les nouvelles piles comme indiqué sur le schéma de polarité (+/-) reproduit à l'intérieur du compartiment de piles.
4. Bien refermer le couvercle du compartiment de piles.

SAFETY INSTRUCTIONS

Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the product. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e., alkaline/standard).

DO NOT recharge non-rechargeable batteries.

DO NOT use rechargeable batteries. The product may not operate properly and may not function at all.

DO NOT short-circuit the supply terminals.

IMPORTANT INFORMATION

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS recharger des piles non rechargeables. Les piles rechargeables ne doivent être chargées que sous la supervision d'un adulte.

NE PAS utiliser de piles rechargeables. Le produit pourrait ne pas fonctionner correctement ou NE PAS fonctionner du tout.

NE PAS court-circuiter les terminaux d'alimentation.

USB Cable

Use only the USB cable provided by LeapFrog Enterprises, Inc. Using any other cable may exceed FCC and other regulatory emissions limits. The USB cable is not a toy. Cable provided is a shorter model to provide additional protection against strangulation. Only adults should connect the product to this cable.

⚠ WARNING: The USB cable could be a strangulation hazard. Keep out of reach of children under 3 years of age. The USB cable must be used only by an adult when connecting to a computer and is to be removed by the adult prior to the use of the toy by a child. DO NOT allow child to play with the toy if the USB cable is attached.

Câble USB

Utilisez exclusivement le câble USB fourni par LeapFrog Enterprises, Inc. L'utilisation d'un autre câble peut dépasser les limites de la FCC (Commission fédérale américaine des communications) et les autres limites réglementaires en matière d'émission. Le câble USB n'est pas un jouet. Le câble fourni est un modèle plus court afin de renforcer la protection contre l'étranglement. Seuls les adultes devraient connecter le produit à ce câble.

⚠ AVERTISSEMENT : Le câble USB peut constituer un risque d'étranglement. Le garder hors de portée de tout enfant âgé de moins de 3 ans. Le câble USB ne doit être utilisé que par un adulte lors de la connexion à l'ordinateur et doit être enlevé par l'adulte avant qu'un enfant n'utilise le jouet. Ne pas autoriser un enfant à jouer avec le jouet si le câble USB y est accroché.

⚠ CAUTION: Routinely check this product for proper and safe condition. If there is any damage or broken parts, remove product from use.

⚠ ATTENTION : Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.

⚠ CAUTION: This is not intended as a crib toy. To prevent entanglement injury NEVER add strings, ties or other products to this item.

⚠ ATTENTION : Ce jouet n'est pas conçu pour les berceaux et les lits d'enfants à barreaux. Pour éviter tout danger d'enchevêtrement, ne JAMAIS rajouter de ficelles, rubans ou toute autre attache à ce jouet.

TROUBLESHOOTING

Symptom	Try This
My Pal Scout or Violet does not turn on or does not respond	<ul style="list-style-type: none"> Make sure the Power/Volume switch is not in the OFF position Make sure batteries are correctly installed Make sure battery cover is securely attached Remove batteries and put them back in Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth Install new batteries If USB cable is connected, remove it
My Pal Scout or Violet operates erratically or makes loud noises	<ul style="list-style-type: none"> Follow the above instructions to clean battery contacts Turn Scout or Violet off and install new batteries
Computer does not detect My Pal even though USB cable is connected on both ends	<p>If you have the LEAPFROG® Connect Application for My Pals installed:</p> <ul style="list-style-type: none"> Check to see if the USB cable is pushed all the way into each of the ports Disconnect and reconnect the USB cable to the toy. It might take a moment to recognize the toy Disconnect all other devices with USB (other than the mouse and keyboard) then reconnect the toy Try connecting the toy to a different USB port Be sure to connect to a USB port and not a USB hub Use the included USB cable <p>If you have not yet installed the LEAPFROG® Connect Application for My Pals:</p> <ul style="list-style-type: none"> Download the application from leapfrog.com/MyPals Install and run the application. Then follow the on-screen instructions Disconnect and reconnect the USB cable to the toy

For a more detailed list of troubleshooting hints and other helpful information, go to leapfrog.com/support.

PC Requirements

Internet connection (high-speed connection recommended)
Pentium® III or equivalent (1 GHz processor or faster recommended)
Windows® XP or Windows Vista® operating system
Monitor resolution of 1024 x 768
Available USB port
256 MB of RAM (512 MB recommended)
300 MB free disk space
Microsoft® Internet Explorer® Internet browser version 6 or higher
Adobe® Flash® Player 9

Mac® Computer Requirements

Internet connection (high-speed connection recommended)
PowerPC™ G4 or any Intel®-based Apple® computer (1 GHz processor or faster recommended)
Mac OS® X 10.4.11+ operating system software
Monitor resolution of 1024 x 768
Available USB port
256 MB of RAM (512 MB recommended)
300 MB free disk space
Safari® application program
Adobe® Flash® Player 9

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

Canada:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.

- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the adult to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'adulte doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

CONSUMER SUPPORT

U.S. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funtastic.com.au.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, SEE THE LEARNING, FRIDGE PHONICS, TAG, the Tag logo and the Tag Junior logo are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2009 LeapFrog Enterprises, Inc. All rights reserved. All other trademarks are properties of their respective owners.

leapfrog.com



Model Number 19156 for Scout or Model Number 19157 for Violet.

LeapFrog Enterprises, Inc., 6401 Hollis Street, Emeryville, CA 94608 USA
(800) 701-LEAP (5327)

For ages 6-36 months. / Convient aux enfants de 6 à 36 mois.

Part number: 605-11476-C

Item Number: 19156 (My Pal Scout) or 19157 (My Pal Violet)