

## BATTERY INSTALLATION

Open battery compartment door on bottom of candle by pushing clip inward and pulling up. Insert 4 "AA" type alkaline 1.5V batteries (included), ensuring correct polarity. Close door.

**NOTE:** Prior to battery installation, clean battery and compartment contacts.

## HOW TO OPERATE THE CANDLE


### "ON/OFF" MODE

1. Press the **GREEN** button briefly to turn the candle on.
2. To turn the candle off, press the **GREEN** button briefly again.

### TO ACTIVATE 4-8 HOUR TIMER MODE

*Candle will turn on at the same time every day & turn off automatically 4 or 8 hours later.*

Hold the **GREEN** button & wait for candle to blink

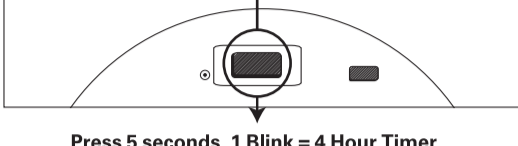

**Press 5 seconds, 1 Blink = 4 Hour Timer**

**Press 10 seconds, 2 Blinks = 8 Hour Timer**

**Press GREEN Button for 1 second = Deactivate Timer**

## REMOTE HANDSET OPERATION MODES

Press **ON** button to turn candle on and press **OFF** button to turn candle off.

Press **Low Light** button to dim the candle light effect and

Press **High Light** to return to optimum brightness.

To activate **DELAYED START**, Press **2,4,6** or **8 hrs** button

while candle is off. Candle will blink once to indicate

**DELAYED START** is set. Candle will then turn on in 2, 4, 6

or 8 hours from when the button is selected and remain on

until the candle is turned off.

To activate remote **TIMER**, press only **4, 6, 8** or **10 hrs**

button while candle is on for selected number of hours,

and stay on before automatically turning off. Candle will

blink twice to indicate **TIMER** is set. Once set, the candle

will turn on at the same time everyday as when first

activated, and turn off automatically in selected hours.

To activate **TIMER** and **DELAYED START** select desired

number of hours you wish to delay the timer and activate

the candle. With candle in off mode, press **DELAYED**

**START 2,4,6** or **8 hrs** button. Candle will blink once. Then

press **TIMER 4,6,8** or **10 hrs** button. Candle will blink

twice. Both **DELAYED START** and **TIMER** features are

now set and will automatically go on and off at the same

time everyday.

To clear any **TIMER** and/or **DELAYED START** settings

press the **OFF** button.



**NOTE:** After a period of time, if the candle does not respond using the remote control unit, it is recommended that the candle's batteries be changed.

## REMOTE CONTROL BATTERY REPLACEMENT

1. Push tab down and pull out battery compartment.
2. Remove used battery and replace with a new CR2032 3V Lithium battery in proper polarity as indicated.
3. Close battery door on the remote control.

### NOTE:

1. This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.
2. Clean the battery contacts and also those of the device prior to battery installation.

## CANDLE CARE

To clean your candle, use a soft, dry cloth.

Please note: the candle flame is fragile, please handle with care.

For optimal performance, place candle on a hard flat surface.

## CAUTION

- **Danger: harmful or fatal if swallowed; combustible, keep out of reach of children.**
- **Swallowing may lead to serious injury or death in as little as 2 hours, due to chemical burns and potential perforation of the esophagus.**
- **If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.**
- **Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.**
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe.
- **Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.**
- **Always purchase the correct use. Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.**
- Replace used Lithium batteries with CR2032 3V Lithium batteries.
- **Replace batteries ensuring proper polarity.** Failure to insert batteries in the correct polarity, as indicated (ill.1), may shorten the battery life or cause them to leak.
- **Remove used batteries promptly. Remove batteries from equipment which is not to be used for an extended period of time.** Remove batteries if exhausted or if product is to be left unused for a long period of time.
- Do not dispose of batteries in fire.
- **This product is a flameless candle. To avoid fire hazard, do not light the wick.**
- This flameless candle is made of real wax. Do not place near any heat source that could cause wax to soften or melt.
- Place the flameless candle on a protective base to avoid wax or oil deposits.
- Avoid contact with water.
- This is not a toy. For decorative use only.
- Always place away from flammable materials and on a temperature-safe surface during use.
- **Never leave a lighted oil candle or lamp unattended, do not store near heat or open flame, use with extreme care at your own risk.**



**Please note:** The colour intensity and shade may vary from candle to candle. Due to various environmental factors, the colour may change or fade over time.

## PATENT: US 9664349B1

**WARNING:** Changes or modifications made to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

**This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions 1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

**Notes:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Regulatory Information CAN ICES-5(B)/NMB-5(5)

### ONE (1) YEAR LIMITED WARRANTY

This product is guaranteed to be free from defects in material and workmanship for one (1) year following the date of purchase (excluding the battery/batteries). Should a defect occur within the warranty period, please contact our customer service line at 1.888.867.6095 or at the following email address: customerservice@sternohome.com. A proof of purchase (sales receipt) is required. If we cannot replace the defective part, you can return your product to the original point of purchase for a full refund or a replacement product. The consumer is responsible for the removal of and reinstallation of the battery. Damage to any parts such as by accident, misuse, or improper installation is NOT covered by this warranty. Our policy does not include liability for incidental or consequential damages; therefore, the above exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from place to place.