 


OWNER'S MANUAL

OZARK TRAIL

12P Tent

HKD Model : WT192117

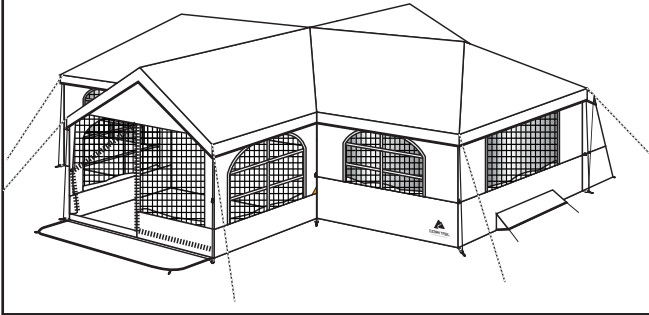

⚠ DANGER!

Stoves, lanterns, candles, grills, heaters and other fuel-burning devices produce carbon monoxide and will consume the available oxygen in a tent. Use of such devices in a tent may cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

- DO NOT use fuel-burning devices inside or near this product.
- Your failure to follow this warning may cause death or serious and permanent injury to you or others.

⚠ WARNING!

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS FABRIC.** This product is made with flame-resistant fabric, which meets CPAI-84 specifications. **IT IS NOT FIREPROOF!** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.
- Anchor properly at all times and carefully consider campsite choice. Be aware of possible falling rocks or tree limbs, lightning strikes, flash floods, strong winds and other hazards which may cause harm to this product or its occupants.
- Have a minimum of two adults for assembly. During assembly poles are under tension. If not held firmly in place during assembly, poles could break or flip up, possibly causing serious injury.
- Safety glasses may be worn throughout the assembly process as an additional precaution.
- Exercise care when using electric devices in and near tents.

ATTENTION: Intended for temporary day use and activities including camping, picnicking, and day tripping. This product is not intended as a semi-permanent shelter.

CLEANING:

Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. **DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE IT IS COMPLETELY DRY BEFORE REPACKING.**

6 MONTHS REPLACEMENT PARTS LIMITED WARRANTY

This product carries a replacement parts warranty against defects in materials and workmanship for a period of 6 months from date of purchase. At its discretion, the manufacturer may provide replacement parts. Original purchaser will be required to provide proof of purchase. The consumer will be responsible for shipping costs incurred outside of the U.S. or Canada.

Warranties **DO NOT** cover normal wear and tear, misuse, abuse, inclement weather conditions (i.e. wind, rain, hail, lightning, tornadoes or hurricanes) or other acts of God, mildew and rotting, damage or fading caused by prolonged exposure to UV rays. This warranty gives you specific legal rights. You may also have other rights which vary depending on locale.

Under no circumstances shall the manufacturer be liable for any incidental or consequential damages.

The tent is water-repellent. It is not waterproof. During heavy or continuous rain, some leakage may occur. Avoid contact between objects and the inside of the tent, as this may result in leakage at points of contact. In the event of seam leakage, apply a seam-sealer compound.

Although our products are manufactured according to rigorous specifications, periods of wind or rain may loosen the stakes and cause the frame to sink into the ground. This will weaken the structure's overall rigidity. Puddles may also form on the roof if the unit has not been assembled tightly. If pooling should occur, it is advisable to drain the fly to avoid possible damage to frame and fabric. Adjustment of guy lines may be necessary. In case of inclement weather, remove valuables and seek appropriate shelter. Intended for recreational use only.

For your tent, screen house or canopy DO NOT...

- Pitch near an open fire.
- Use candles or open flames of any kind inside or near it.
- Leave children unattended inside.
- Use fuel-burning, oxygen-consuming devices (heaters, lanterns, cooking stoves or other flame sources) inside.
- Refuel lamps, heaters or stoves inside.
- Smoke inside.
- Store flammable liquids inside.
- Use water-repellent compounds other than those recommended for use on outdoor equipment.
- Spray with insecticide.
- Store on concrete floor.

For your tent, screen house or canopy DO...

- Always extinguish campfire before sleeping or leaving the area.
- Exercise care when using electricity and lighting.
- Make certain it is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation. Clear frequently.
- Anchor securely to provide additional security in changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement stakes and guy lines.
- Take down and store properly after camping.

NOTICE!

Do Not Return to Store
for Warranty issue call

8 8 8 - 2 8 0 - 7 8 7 6

CAMPING TIPS

The key to an enjoyable camping experience is planning and preparation.

Before you go ...

Research the area where you intend to camp. Prepare for any possible weather condition. Be aware of hazards and emergency protocol. Know the rules and regulations.

Check out your equipment before your trip. Be sure your cook stove, lanterns, flashlights, air mattress, etc., are in good working order. Erect your tent to become familiar with setup. Once you've assembled your tent in a dry, well-ventilated area, apply seam-sealing compound to the stitching of the inside seams following manufacturer's directions. Allow to dry thoroughly before storage. Reapply annually.

Checklists are great planning tools. Here are some areas to consider.

Camp setup: Tent, chairs, table, ground cloth, entrance mat, tarp, poles, rope, stakes, bungee cords, duct tape, zip ties, hammer/tools, bedding.

Kitchen setup, food and beverages: Plan for transport, preparation, storage and disposal. Remember to pack fire-starting devices in waterproof containers, and bring pots, dishes, utensils, can opener, heavy-duty garbage bags and biodegradable soap. Store your food in lockers or out of sight in vehicles.

Clothing: Be prepared for all your activities. Include a hat, sunglasses and quality socks. Dress in layers.

Hygiene: Personal toiletries, rubber gloves, basic first aid items. Don't forget your medications.

Miscellaneous: Extra batteries, sewing kit, clothespins, dust pan/brush and insect-repellant.

Be considerate of others, humans and wildlife.
Remember to clean up and dispose of waste properly.
"Leave no trace behind."

WT192117

ASSEMBLY INSTRUCTIONS

 
IMPORTANT NOTES:

- * Assemble your tent before camping to become familiar with the assembly.
- * Two people are recommended for setup.
- * Select a clean, level area for the campsite free of debris and sharp objects, away from a natural watercourse.
- * Use of a ground cloth is recommended to prolong the life of the tent floor and provide additional insulation and moisture protection.
- * To prevent damage to the zippers, unzip the doors and windows of the tent prior to disassembly allowing air to move freely.
- * Seam seal the inside stitched seams of the tent. This will improve weather resistance. Available in sporting goods departments. Discoloration may occur if applied to outside seams.


Verify Package Contents and Assemble Poles

1) Verify Package Contents and Assemble Poles


Tent : 1 each

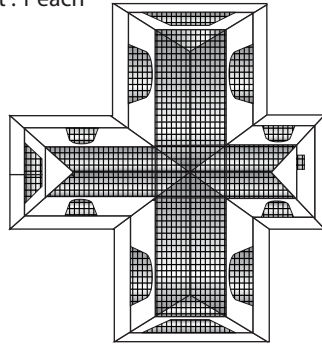

Rainfly : 1 each

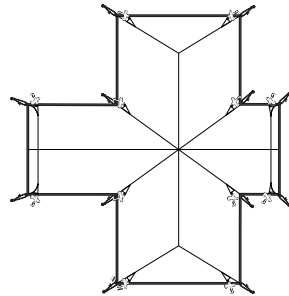 

Divider : 3 each
2 each 1 each

 


Tent Stakes : 35 each



Poles : 48 (total)

() denotes color coding

 (A) Ridge Side (blue/blue) - 2 each



(B) Ridge Front (gray/ivory) - 1 each



(C) Ridge Rear (blue/white) - 1 each



Color Coded Connectors:
21 each



Divider : 3 each

2 each 1 each

 
Remote light : 2 each



Hanging Shelf : 3 each




(F) Roof Side Corner (yellow) - 4 each




(G) Roof Front/Rear/Inner (green) - 12 each



 (H) Eave Shower (orange) - 2 each



(I&J) Leg - 12 each

 


(K) Closet Leg - 4 each



(L) Closet Roof - 2 each





 (M) Closet Rod - 2 each






Step 1: Spread and Stake Tent

  - 1) Spread out the tent floor side down on a flat, clean and level area.
- 2) Stake down the tent by inserting a stake through the stake loops, located at the corners of the tent.
- 3) Hammer the stakes into the ground at a 45° angle using a hammer or mallet.
- 4) Make certain the tent floor is pulled out evenly and tightly.

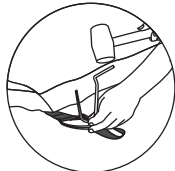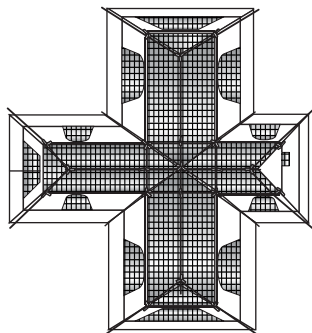




Step 2: Assemble Roof Frame

   - 1) Assemble the roof frame as shown below matching color-coded poles to color-coded connectors. Use the diagram below and the replacement parts listing on page 4 as reference. Make certain the metal springs lock into place on all the connectors.
- 2) Attach ridge poles to pre-attached connectors:
 - (A) BLUE/BBLUE
 - (B) GRAY/IVORY
 - (C) BLUE/WHITE
- 3) Attach S-hooks along the ridge line of the tent to the frame.
- 4) Attach roof poles to pre-attached connectors:
 - (F) YELLOW
 - (G) GREEN
- 5) Attach eave poles to pre-attached connectors:
 - (D) RED
 - (E) PINK
 - (H) ORANGE
- 6) Attach hooks along the roof lines to the frame.

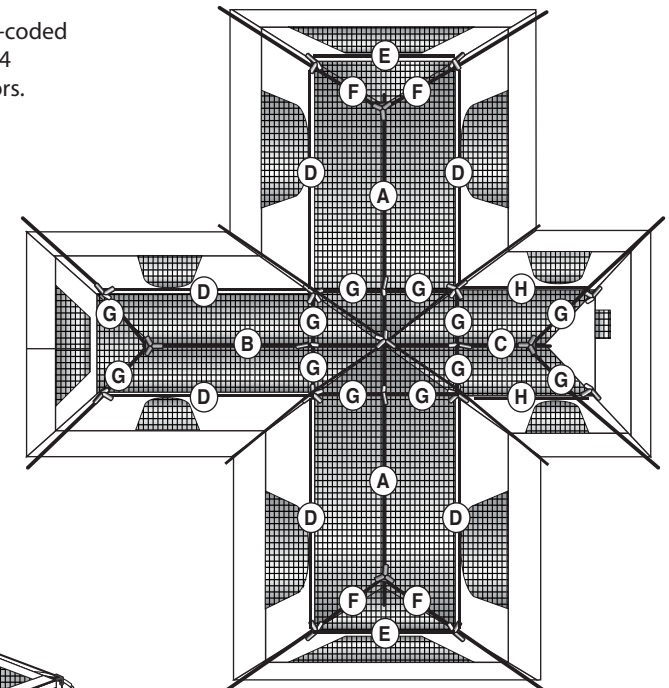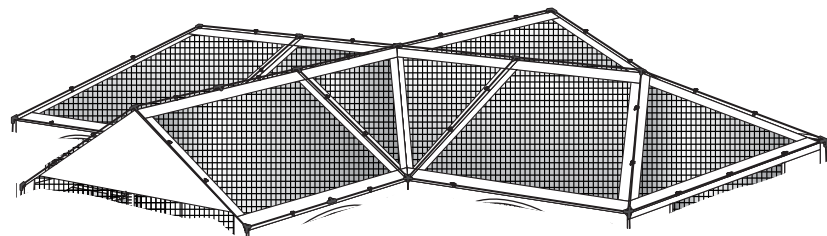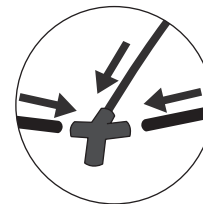



Step 3: Position Fly and Attach Leg Poles

   - 1) With roof frame constructed, unfold and position the fly on the tent as shown below.
- 2) With 2 persons, begin along front side of the long axis of the tent and attach leg poles (J, D-ring below R-spring) into the corner eave connectors (fig.1). Place bottom of the legs onto the corresponding pins along the perimeter of the tent floor (fig.2).
- 3) Repeat along the other side of the long axis of the tent to attach corner leg poles.
- 4) Along the same axis, attach inner leg poles (I, D-ring behind R-spring) to the eave.
- 5) Attach leg poles (I) to the front room corners and shower room corners.
- 6) Attach hooks on the tent to leg poles (fig.3).
- 7) Wrap the hook and loop fasteners, at the corners of the fly, around the frame (fig.4).
- 8) Attach the plastic s-hooks on the fly to the d-rings on each leg pole (fig.5).

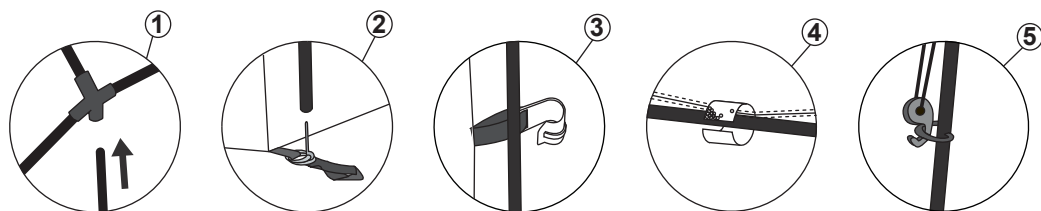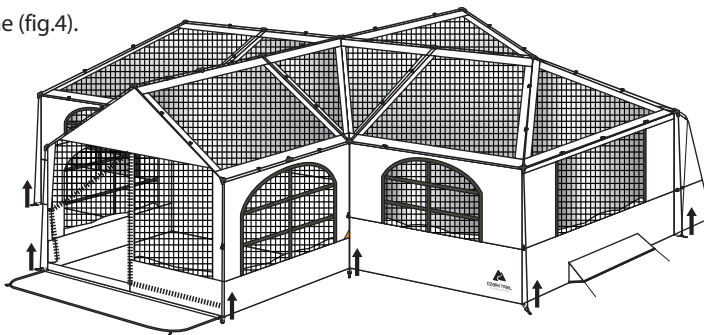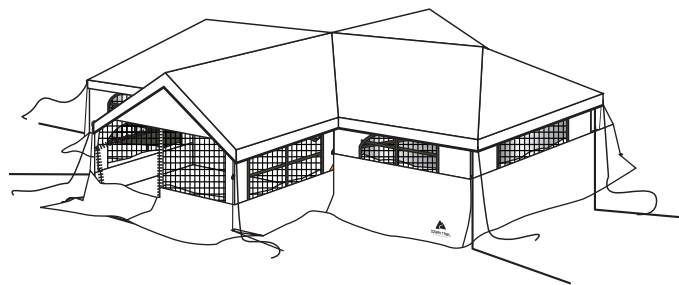



Step 4: Erect Closets

  - 1) Stake the closet corners.
- 2) To support the closets, at the back of the tent insert the closet roof poles (I) through the pole sleeves at the top of the closets.
- 3) Insert the top of the closet leg poles (H) to the closet roof poles. Place bottom of the legs onto the corresponding pins at the tent floor.
- 4) Attach s-hooks on the closet flies to the Leg poles.
- 5) Inside closet rod and shelf may be attached to hooks and loops.

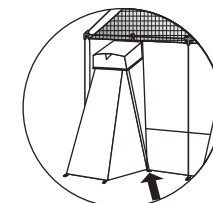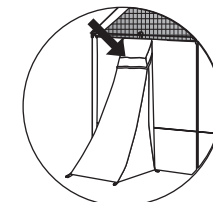



Step 5: Secure guy lines

  - 1) Secure tent using all guy lines and stakes.
Tent must be secured for proper function.
- 2) Side vent may be stake open for added ventilation.

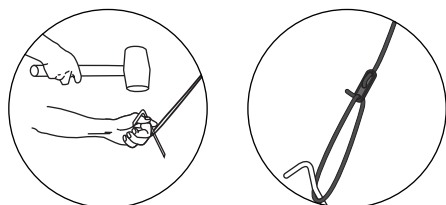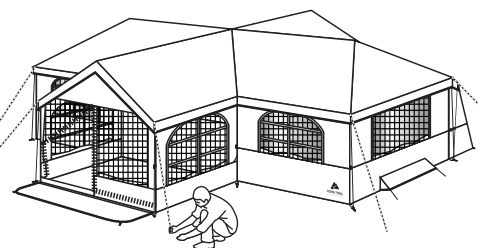

Step 6: Attach optional lights

  - 1) Insert battery pack (batteries not included) into pocket along the eave (12' top right side of the roof and 6' top front of the porch) and close the flap.
- 2) Thread the light rope through the white loops along the roof line. Secure the end of the rope to the clip.

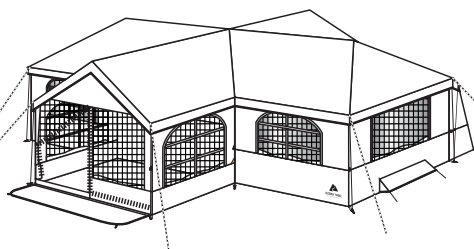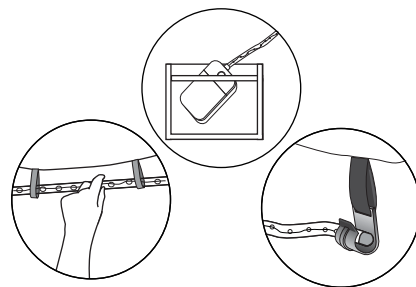

Attach Accessories

 
- 1) Dividers can be attached to loops along the eaves of the tent and shower.
- 2) Movie screen may be attached to loops around right side window.
- 3) Attach shower shelf to loops at corner of shower.

Disassembly


- 1) To take down the tent, disassemble in reverse order.
- 2) Remove accessories (if included)
- 3) Remove and fold fly.
- 4) Be sure to leave doors and windows unzipped to avoid zipper damage.
- 5) Remove stakes with hammers or stake puller. **DO NOT** pull on tent.
- 6) Carefully disengage poles from pins. Push poles away from you through the sleeves to minimize risk of damage to tent or poles.
- 7) Keep poles and stakes together in bags provided.

Packing the tent

- 1) Spread tent flat, distribute evenly.
- 2) Fold into quarters not to exceed the length of pole bag.




 - 3) Lay pole bag at opposite end from door. Tightly roll bag, skin and fly forcing air through unzipped door.



- 4) Secure with ties and place in carry bag with stakes and accessories.
- 5) Tent must be clean and dry before storage. Store off concrete floor.

 **Be certain campfires are extinguished.
Dispose of trash appropriately.**

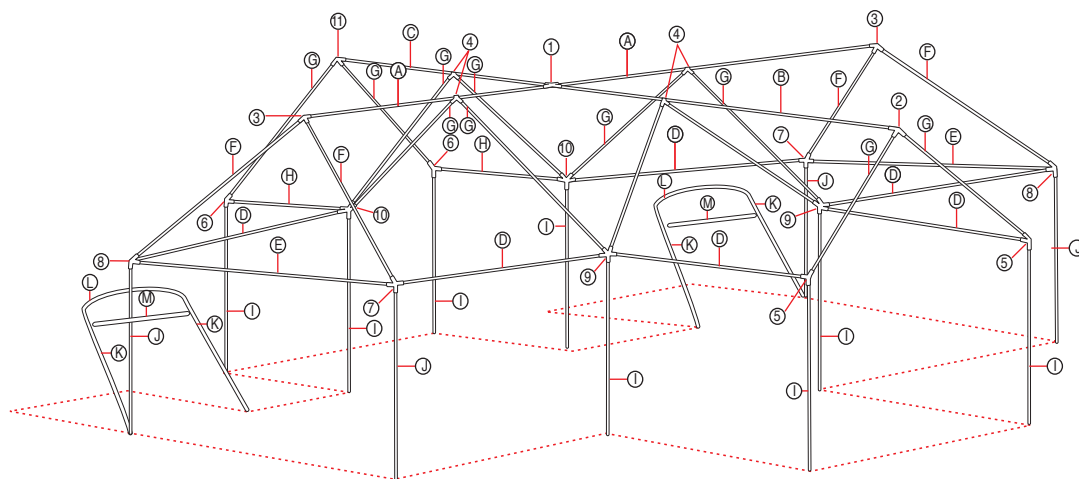

SPECIFICATIONS:	12 persons	
	Floor size:	21' x 17' (6.41 x 5.18m)
	Center height:	86" (2.18m)
	Net weight:	81.04lbs (36.70kg)

REPLACEMENT PARTS

KEY NO.	MODEL NO. WT192117		QTY. REQ.
	DESCRIPTION	PART NO.	
A	St Pole-Ridge Side	HSP19-200rx2,sx1+hub	2
B	St Pole-Ridge Front	HSP19-295rx2	1
C	St Pole-Ridge Rear	HSP19-174rx2,sx1	1
D	St Pole-Eave Front/Rear	HSP19-190rx2	6
E	St Pole-Eave Side	HSP19-196rx2	2
F	St Pole-Roof Side Corner	HSP19-150rx2	4
G	St Pole-Roof Front/Rear/Inner	HSP19-115rx2	12
H	St Pole-Eave Shower	HSP19-075rx2	2
(I/J)	St Pole-Leg	HSP19-167d,rx1	12
K	St Pole-Closet Leg	HSP13-142d,pb,sw	4
L	St Pole-Closet Roof	HSP13-63a	2
M	Fr Pole-Closet Rod	HFP8.5-058cx2	2
1	Hub-Ridge Center	HHHK15-154-2	1
2/11	Hub-Ridge Front/Rear	HHHK15-026-1	2
3	Hub-Ridge Side	HHHK15-165-2	2
4	Hub-Ridge Inner	HHHK15-166-2	4
5	Hub-Eave Corner Front	HHHK15-023-1	2

	DESCRIPTION	PART NO.	QTY. REQ.
6	Hub-Eave Corner Rear	HHHK15-024-1	2
7/8	Hub-Eave Side	HHHK15-164-2	4
9/10	Hub-Eave Inner	HHHK15-249	4
	Fly	HTFWT192117	1
	Divider	Room/Shower	2/1
	Rope Light	HRL06/HRL12	1/1
	Movie Screen	HVS33x28	1
	Shelf	Closet/Shower	2/1

TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
1. CONDENSATION	This is caused by lower temperatures on the outside of the tent combined with body heat on the inside of the tent. When this occurs, avoid touching walls to reduce contact leakage. Leaving the doors and windows open will reduce moisture condensation. Store wet clothing outside of tent. Not applicable to screen houses.
2. SEAM LEAKAGE	Apply a generous amount of seam sealer on inside seams. Seam sealer may be purchased at any local sporting goods store.
3. MILDEW	To avoid mildew, store tent/screen house ONLY when thoroughly dry. However, if mildew occurs use a soft bristle brush or sponge with mild dishwashing soap or Fels Naptha soap to clean. Let dry thoroughly and a tent approved water repellent compound may be applied.
4. REPAIRING A TEAR	For small tears use a self-adhesive patch kit. We recommend a canvas or awning repair shop for larger tears.
5. FAULTY ZIPPER	Zippers are self repairing. If the zipper separates, you can move the slider to the beginning of the zipper tape and rework the zipper.
6. FADING FABRIC	Do not leave up in direct sunlight longer than necessary. If left in sunlight for prolonged periods of time, fabric will fade and weaken.
7. FLOOR CONDENSATION	A ground cloth under the floor helps prolong its life, provides additional insulation and moisture protection. The cloth should be smaller than the floor to prevent rain from running under the tent. Not applicable to screen houses.
8. USE OF STAKES	Stakes should be installed at a 45 degree angle using a hammer or mallet. Stake loops should be kept taut without over stretching fabric or webbing. This could cause tears or leakage. To remove safely, use a hammer or stake puller. Do not remove by pulling on the fabric.