


OWNER'S MANUAL

MODEL # WF-20984 12 PERSON CABIN TENT
20ft x 9ft x 84in/6.1m x 2.74m x 2.13m

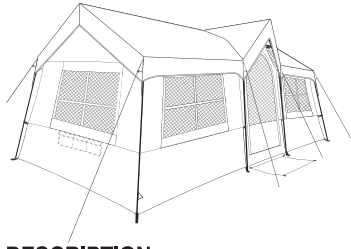

✓ QTY.	DESCRIPTION	PART NUMBER
FABRIC BODY:		
— 1	Tent Body	N/A
— 1	Tent Fly	N/A
POLES:		
— 9	Steel, Chain-corded Leg Pole – black w/ white taped	LPOL – 162BK
— 2	Steel, Chain-corded Front Roof Pole – black w/ red taped	FRPL – 245BK
— 2	Steel, Chain-corded Middle/Rear Roof Pole – black w/ red taped	MRPL-618BK
— 7	Steel, Chain-corded Gable Pole – black w/ blue taped	GPOL – 122BK
— 2	Steel, Chain-corded Roof pole on Front Door – black w/ green taped	RFPL – 084BK
— 1	Steel, Chain-corded Gable pole on Front Door – black w/ yellow taped	GFPL – 106BK
— 1	Steel, Short Eave Pole	EPOL – 010BK
— 2	Steel, Curved Closet Roof Pole	CRPL – 036BK
— 4	Steel, Chain-corded Closet Leg Pole	CLPL – 158BK
CARRY BAG:		
— 1	Carry Bag w/ wheels	N/A
UNIVERSAL PARTS (some attached to poles and fabric):		
— 4	3 way hubs – for shoulder corners	3WAY-SC
— 4	4 way hubs – attached on the Middle/Rear Roof Pole	4WAY-MR
— 2	3 way hubs – attached on the Middle Roof Pole	3WAY-MP
— 2	3 way hubs – for both ends of the Middle Roof Pole	3WAY-ME
— 1	3 way hub – for roof of the front door	3WAY-FR
— 2	3 way steel hubs – for front door shoulders	3WAY-FS
— 1	Pole Bag	N/A
— 1	Stake Bag	N/A
— 11	Guy Ropes: φ4mm, 3.0m	GROPE-3M-4
STAKES:		
— 34	Steel Stakes	STS-180

Review your parts list above to make sure all parts listed above have included in your package.

Please do NOT return product to store.

Call our toll free number: 1-877-579-1550 Monday-Friday 8:30 am - 5:30 pm EST

Mention your complete Model Number so that our Representative may assist you!

Note: Only items with Part Numbers can be ordered.

ASSEMBLY INSTRUCTIONS

THIS RECREATIONAL PRODUCT REQUIRES TWO PEOPLE TO ASSEMBLE.

- Unless otherwise specified all instructions will be given assuming the assembler is facing the front opening of the tent.
- Carefully fold out your poles, using caution to prevent snapping the shock-cording. Make sure each pole segment is "seated" into the next section before flexing the pole during set-up. Sort POLES by type and length; refer to parts list descriptions.
- Do not drop tent bag or pole bag. Do not bounce tent bag on its end to remove tent, as these actions may damage the shock-cord and/or pole ends.

STEP 1: Verify Package Contents


Verify package contents by emptying contents of bag(s) and confirming all parts are included and undamaged.

Tip: Do this at home before you leave on your trip.


STEP 2: Set Up the Tent

- A)** Select a smooth level site and spread out your tent floor side down.
- B)** Extend all of the poles and sort into groups by type. Assemble the roof frame as shown below, matching the color coded poles to the hub connectors of the same color. You may need to twist the pole to get the metal spring to engage and lock the pole into place.
1. Red roof poles
 2. Blue gable poles
 3. Green roof poles on front door
 4. Yellow gable pole on front door
 5. Short Eave Pole on front door with no color code

C) Attach plastic hooks on the fabric roof to the frame.

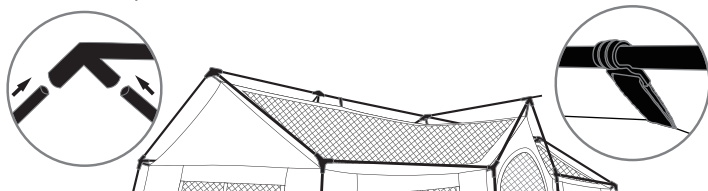


D) Unfold and position the Fly on the tent as shown below. Fasten the Velcro on the fly to the frame roof.


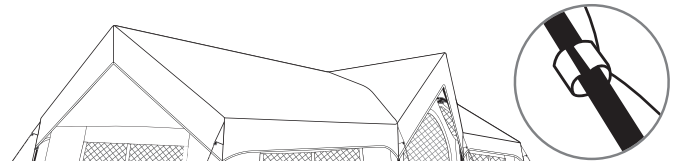


E) Attach the leg poles with white color coding to the white color coded connector on the roof frame. Make sure to insert the pins along the perimeter of the tent into the bottom of the leg poles.

F) Attach the "S" hooks on the fly and the plastic hooks on the tent body to the D-ring on each leg pole.

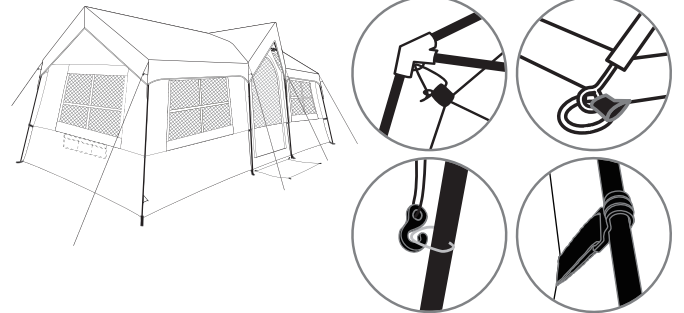

G) To assemble the closet, insert the curved closet pole into the sleeve and insert the pins, located near the floor of the tent, into the bottom of the closet pole.

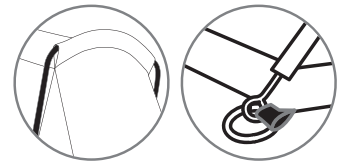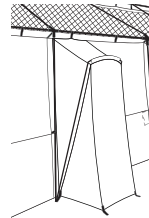

STEP 3: Stake the tent

- A)** Secure the tent by driving stakes into the ground at a 45 degree angle through the webbing loops attached to the rings at the tent base.
- B)** To secure the guy lines, find the guy line plastic slider and pull the portion of the line opposite of the knot. When pulling this portion, it will form a loop and work like a slip knot. Continue pulling this portion until you can conveniently extend the guy line to the ground and stake down. Repeat with remaining guy lines.

Tip: Stakes provided are for solid ground. Camping in sand? We suggest corkscrew style. Check favorite retailer for availability.

STEP 4: Add Accessories

- A)** Attach the two dividers by attaching the plastic toggles to the fabric loops sewn into the walls of the inner tent. Both dividers can be moved to the sidewall of the tent (directly in front of either side window) and the one with silver coating can be used as a projector screen.
- B)** Attach the Ipad pocket, Triangle mesh pocket and Locker mesh pocket with plastic hooks and fabric loops.
- C)** Attach the LED light string with the plastic hooks to the O-rings sewn inside the tent, and put the Power Box into the pockets.
- D)** Position the mud mat at the front door with stakes.
- E)** Fasten the Velcro at both ends of the daisy chain to the fabric loop sewn in the tent.

Tip: The Carabiners on the daisy chain can be only used on the tent for hanging lightweight items.

DISASSEMBLY INSTRUCTIONS

• Store all Poles and Stakes in their corresponding Bags to prevent any possible tearing or damage to the fabric piece(s).

STEP 1: Remove the Stakes

Carefully remove stakes by pulling out the hook ends, clear the excess soil from stakes and store them in their bag.

STEP 2: Take Down the Tent

- A)** Take Down all the accessories.
- B)** Remove the leg poles from the pin-rings, and undo ties securing leg poles. Take down the tent body from the frame.
- C)** Disengage poles from hubs.
- D)** Carefully fold poles and store them in their bag.

STEP 3: Fold the Tent

Fold tent into rectangular shape the width of pole bag. Place organizer, floor on tent body. Lay pole bag at one end of tent and roll tightly together, slowly squeezing air out as you go.



INTRODUCTION

A MESSAGE TO OUR CUSTOMERS:

Thank you for purchasing a quality product manufactured by WESTFIELD OUTDOOR INC. As the world leader in outdoor recreational products, we pride ourselves in delivering quality, customer friendly products. Please visit our authorized retailers for many quality products to suit your needs from WESTFIELD OUTDOOR INC. As a valued customer, your satisfaction is very important to us. We welcome your feedback and await your responses, suggestions, and recommendations. Email us via info@westfieldoutdoors.com or visit our website www.westfieldoutdoor.com.

WE ADVISE YOU TO ASSEMBLE THIS PRODUCT AT LEAST ONCE AT HOME BEFORE GOING ON A TRIP. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself setting up in the dark or adverse weather conditions.

GET THE MOST ENJOYMENT FROM YOUR PRODUCT BY READING THIS OWNER'S MANUAL THOROUGHLY; THEN FOLLOW OUR CAMPING SUGGESTIONS OUTLINED BELOW. NOTE THE SYMBOLS WE USE AND WHY:

-  CALLS YOUR ATTENTION TO ANY POSSIBLE HAZARDS IN THE USE AND HANDLING OF YOUR PRODUCT.
-  CALLS YOUR ATTENTION TO PROVEN SUGGESTIONS COLLECTED FROM OUR CAMPING EXPERTISE AND WILL ENHANCE YOUR EXPERIENCE!

IMPORTANT NOTICE: You may compromise the original FIRE RETARDENCY and WATER REPELLENCY protective coatings when you apply sprays or other chemical treatments to your tent.

This fabric has been factory-treated and is HIGHLY WATER-REPELLANT; however, it is NOT WATERPROOF. All tents can experience seam leakage during wet weather. If you desire additional moisture protection, use a seam sealing compound ONLY; be sure to follow the manufacturer's directions. We recommend sealing your tent during your initial setup and prior to each camping season. Seam Sealer Compounds can be purchased at your local camping products retailer. For more information, please refer to our website, www.westfieldoutdoor.com or contact our Service Representatives via info@westfieldoutdoors.com



DO NOT SPRAY!



THIS FABRIC IS NOT WATERPROOF!

Your product's fabric is a synthetic material that has been treated and is not only highly-resistant to the sun's Ultraviolet (UV) light but also highly water-repellant in light rain conditions. Insure a successful and enjoyable camping experience by heeding the following tips:


- Keep objects from touching the inside, as objects will "draw in" moisture at the point of contact.
- "Prep" your product where necessary with a recommended seam sealing compound – refer to the seam sealing information in DO NOT SPRAY section of this owner manual.


Important: Prolonged exposure to sunlight that causes UV damage and/or the use of non-recommended foreign substances on synthetic material may damage the fabric properties and IS NOT COVERED BY THE LIMITED WARRANTY.



OUR RECREATIONAL PRODUCTS ARE CONSTRUCTED USING CUSTOM SPECIFICATIONS. THIS ITEM IS NOT INTENDED FOR USE AS A PERMANENT STRUCTURE. However, they are not engineered

for extreme weather, climates or environments. Modification, abuse, and inclement or "surprise" weather conditions may make additional precautions necessary. Here are some tips should you find yourself preparing for adverse conditions:

 Make sure any guy lines/ropes on your structure are well-secured in the ground and lines/ropes are sufficiently "taught" between structure and stake; adjust where needed. Facing periods of heavy winds? Secure tent loops and guy lines/ropes with extra stakes if necessary.

 Check the corners of the roof fabric and make sure roofline is properly positioned on framing. Use ALL provided methods of securing your fabric to its framing: nylon fastener strips, ties, and guy lines/ropes where located. Storms or steady rains may collect in water pockets on the roofline. Water adds weight, and weight weakens the overall structure. Avoid possible collapse by maintaining a watchful eye and removing any water accumulation that may occur.



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT FABRIC. THIS FABRIC IS NOT FIREPROOF! It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

Do NOT ERECT NEAR an open flame. NEVER use any fuel burning, oxygen consuming devices, or any device that produces fumes – including, but not limited to: cooking stoves, lanterns, candles, hibachis, or heaters – in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.



Your product is NOT machine washable. Your product is NOT machine dryable.

CARE & STORAGE One of the easiest ways to damage your product is storing it while wet. If you must close camp in the rain, follow these guidelines carefully:

- As Soon As Possible: Open your product and ensure that every area of fabric is clean and completely dry before rolling up for storage.
- If necessary, hang product outside or loosely drape over a ladder in your garage or spare room for a few days, turning it inside and out to prevent trapping pockets of water or debris.
- Use a soft brush to wipe away surface dirt.

To clean your product: Hand wash using a mild dishwashing soap and soft bristle brush, then allow the fabric to completely air dry.

Don't neglect the frame: Wipe down all parts – steel, plastic, and fiberglass – before putting away for next season's use. Salts from ocean air can and do affect damage if not dealt with as quickly as possible.

Storing a wet fabric for as little as 24 hours in warm weather is likely to cause fabric to mildew. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric's coatings; chemicals or cleaning agents used to remove dirt and stains may irreversibly harm the fabric.

Salts, mildew and other causes and subsequent effects are NOT covered under the limited warranty.

LIMITED 6 MONTHS WARRANTY

If your product does not work properly because of a defect in materials or workmanship, WESTFIELD OUTDOOR INC will, for 6 months from the date of purchase, at its option either (a) repair our product with new or refurbished parts, or (b) replace it with a new product. The decision to repair or replace will be made by WESTFIELD OUTDOOR INC. WESTFIELD OUTDOOR INC RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

If repair is needed during the limited warranty period, the purchaser will be required to furnish a sales receipt as proof of purchase indicating date of purchase, amount paid, and place of purchase. Product will not be covered under warranty due to damages resulting from misuse, excessive or abusive usage, and/or inclement weather conditions (i.e. wind storms, hurricanes, lightning storms, tornadoes). Acts of God resulting in damage to tent and its components are not covered under this limited warranty. In such event, the consumer assumes cost of needed parts. WESTFIELD OUTDOOR INC is not responsible for normal wear and tear, zipper exhaustion, or the natural breakdown in materials that occurs with extended use.

UNDER NO CIRCUMSTANCES SHALL WESTFIELD OUTDOOR INC BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

WESTFIELD OUTDOOR INC EXPRESSLY EXCLUDES ALL WARRANTIES, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow the exclusion or limitation of implied warranties, so the above exclusion may not apply to you.

NOTWITHSTANDING ANYTHING TO THE CONTRARY, WESTFIELD OUTDOOR'S AGGREGATE LIABILITY, WHETHER IN CONTRACT OR TORT, SHALL BE LIMITED TO ACTUAL DIRECT MONEY DAMAGES IN AN AMOUNT NOT TO EXCEED THE PRICE PAID BY THE END-USER FOR THIS PRODUCT.

HOW TO OBTAIN WARRANTY SERVICE: Call the toll free number during the business hours mentioned below. You must have a copy of your purchase receipt from an authorized dealer as proof of purchase at time of call. Under no circumstances is WESTFIELD OUTDOOR INC obligated, nor will it warranty, any WESTFIELD OUTDOOR, INC product that is sold or provided by an unauthorized, secondary market dealer. This shall include, but not be limited to, surplus dealers, public markets, etc.

HOW TO ORDER REPLACEMENT PARTS: When ordering replacement parts, always include the Model Number, Part Number, and Part Description. Call toll free 1-877-579-1550 · Mon-Fri, 8:30 a.m. to 5:30 p.m. (Eastern Standard Time)