


6-PERSON INSTANT CABIN TENT WITH LED LIGHTED POLES - 10 x 9

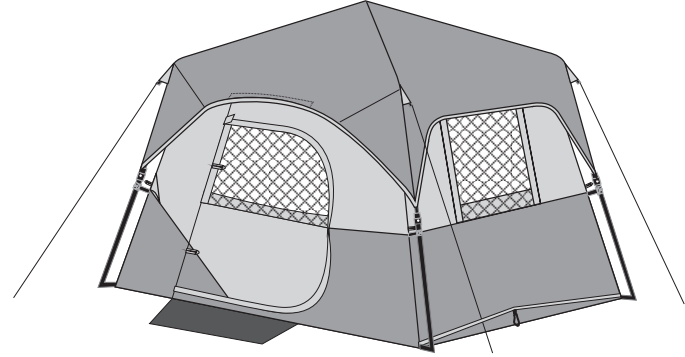

For more in-depth videos, setup demonstrations and product information, please visit www.Walmart.com

Before you begin


Read all instructions thoroughly before beginning set up.

- Select a level site clear of rocks, branches and other hard or sharp objects, to set up your shelter.


⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- For best results in windy conditions, position narrow end of tent into the wind.
- Secure with all stakes and guylines provided to prevent property damage or personal injury.
- Two people can easily setup this tent in 60 seconds or less.


Parts List:

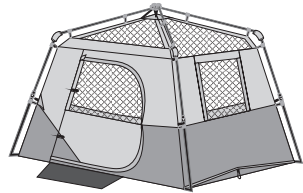

A (1) Integrated Frame with Tent Body

 


B (1) Rainfly

 


C (1) Battery Compartment



 
D (1) Built-in On/Off Switch



F (1) Gear Loft

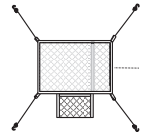

E (1) Media Pocket

 

G (1) Hanging Organizer



H (1) Shockcorded Awning Pole



 
I (10) Stakes



J (1) Stake Bag




K (1) Pole Bag




L (1) Carry Bag

SET UP


1 UNFOLD TENT

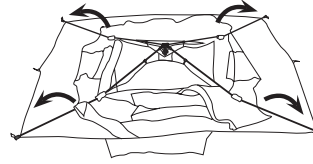


3 EXTEND & LOCK POLES

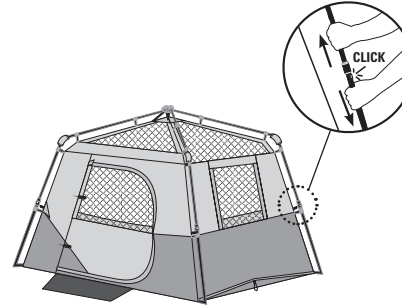

5 CLIP SHOCKCORD HOOK ONTO FABRIC LOOP ON TENT

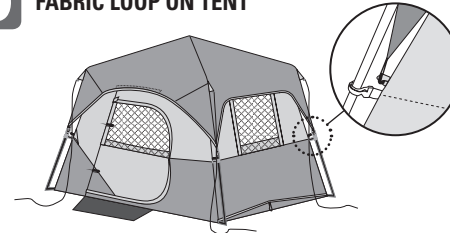


7 STAKE TENT & GROUND VENT

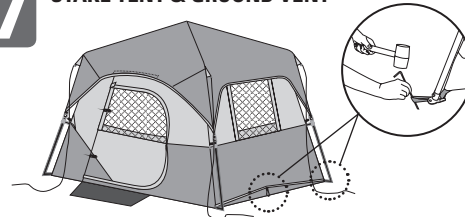

Item No. WMT-100966L3
Model No. 30585


2 LIFT UP ON ARM JOINT

2 people will be needed to erect the tent

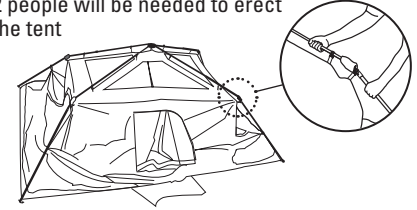


4 DRAPE RAINFLY OVER TENT & SLIDE AWNING POLE THROUGH SLEEVE

located on underside of Rainfly & secure pole ends into metal grommet

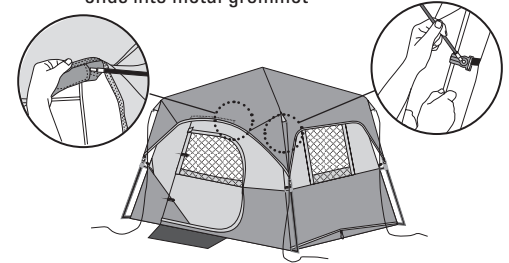


6 SECURE TO LEG POLES WITH HOOK & LOOP FASTENERS


located on underside of Rainfly

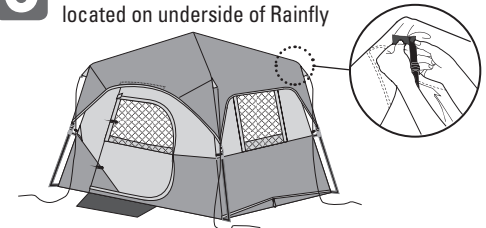

8 STAKE & ADJUST GUYLINES

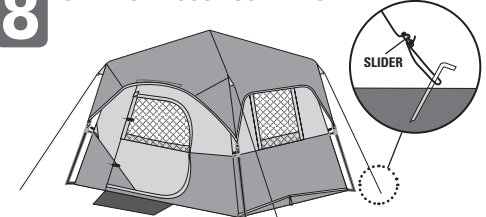


Lighting Component:

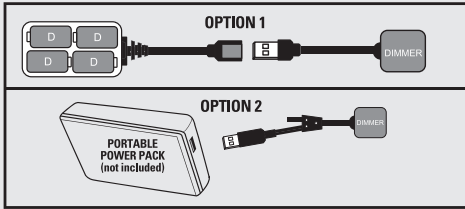


Add 4-D batteries to empty battery pack. (Batteries not included)

Plug in and spin cover to secure. **NOTE:** Portable Power Pack in Option 2 is not included.

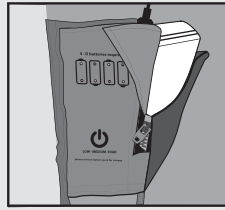

Slide battery pack in sideways, then all the way in.

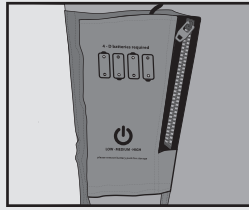


Zip up pouch - use switch to turn on light (low/medium/high).

CAUTION: USB is not compatible with charging external device.


TEAR DOWN

1 REMOVE RAINFLY & AWNING POLE

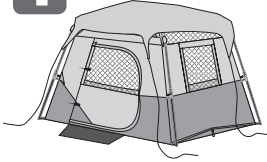


*** REMOVE BATTERY PACK FOR STORAGE**

2 UNLOCK POLES

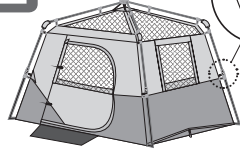

3 PUSH DOWN ON ARM JOINTS then raise pole connectors to center hub

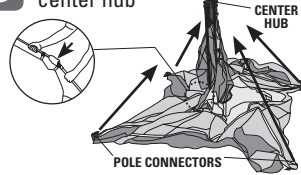

CENTER HUB & POLE CONNECTORS



FABRIC STRAPS

4 TIGHTLY ROLL TENT FABRIC AROUND FRAME to remove excess air. Secure with fabric straps, place in carry bag.

Storing the Tent

- Remove stakes and place in their storage bag.
- All stakes must be placed in their own storage bag before placing in tent carry bag to prevent damage to the tent fabric.
- Store in a clean, dry area.

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt.
- **STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.**
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made of flame-resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIRE-PROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective.

DO NOT use fuel burning devices inside or near tent materials.

DO NOT permit children to light matches, operate burning appliances or handle any flame sources in or near the tent.

- Do not smoke, use matches, candles or open flames of any kind in or near the tent.
- Do not refuel lanterns, stoves or heaters inside tent.
- Do not cook inside tent.
- Do not store flammable liquids inside tent.



DO NOT SPRAY!

IMPORTANT:

THE ORIGINAL FIRE RETARDANT AND WATER REPELLENT PROTECTIVE COATINGS MAY BE COMPROMISED IF SPRAYS OR OTHER CHEMICAL TREATMENTS ARE USED ON THE TENT. FABRIC HAS BEEN FACTORY TREATED. IT IS HIGHLY WATER-REPELLANT; HOWEVER, IT IS NOT WATERPROOF. ALL TENTS CAN EXPERIENCE SEAM LEAKAGE DURING WET WEATHER. IF YOU WANT ADDITIONAL MOISTURE PROTECTION, TRY A SEAM SEALING COMPOUND ONLY; STRICTLY FOLLOW THE MANUFACTURER'S DIRECTIONS. IT IS RECOMMENDED THAT YOU SEAL THE TENT DURING THE INITIAL SETUP AS WELL AS PRIOR TO EACH CAMPING SEASON. SEAM SEALER COMPOUNDS CAN BE PURCHASED AT YOUR LOCAL CAMPING PRODUCTS OUTLET. FOR MISSING PARTS CALL 1-888-774-5840.

PLEASE DO NOT RETURN THIS PRODUCT TO THE RETAIL STORE.

REPAIR PARTS LIST

Part Number	Description
90007	Base of Pole Connector
90021	Foot Connector
90313	Storage Organizer
90603	Media Pocket
90604	Gear Loft
91137	Leg Pole
91138	Eave Pole with LED Light
91139	Awning Pole
91140	Center Hub
91141	On/Off Switch
91142	Battery Compartment
91150	Corner Joint
91155	Eave Pole without LED Light
91414	Rainfly

6 Month Limited Warranty

Campvalley Global Limited warrants for a period of 6 months from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, Campvalley Global Limited may provide replacement parts to original purchaser. Original receipt or proof of purchase as well as proof of defect is required. Campvalley Global Limited will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser six months from the date of purchase and is not transferable. This Warranty does not cover any product purchased through non-authorized dealers and/or online auction websites.

This Warranty Does Not Cover

This 6 Month Limited Warranty does NOT cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain or hail. In case of inclement weather remove all valuables and persons and seek appropriate shelter. Under no circumstances will Campvalley Global Limited be liable or responsible for any incidental or consequential damages.

This product is designed and intended for recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 6 Month Limited Warranty.

All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

To Obtain Warranty Service

Call Toll Free 1-888-774-5840 for warranty service, repair parts, or product questions. Mon-Fri, 8:00 a.m. – 5:00 p.m. Central Time.

NOTICE: DO NOT RETURN PRODUCT TO RETAIL STORE.

Campvalley Global Limited
Plot # 30-32, Sector-3, Karnaphuli,
Chittagong 4204, Bangladesh

Made in Bangladesh • Printed in Bangladesh

Revised 10/17/18