


INSTRUCTION MANUAL

TWIN WOODEN DAYBED

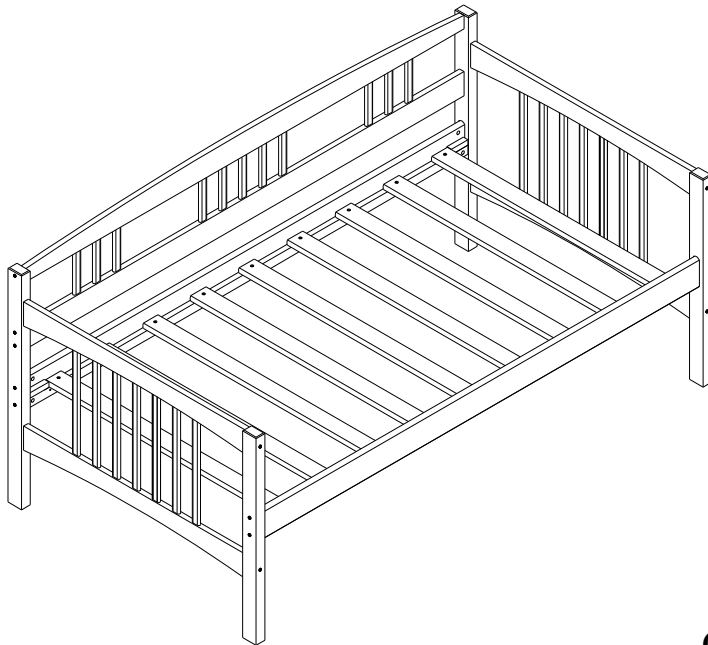

MODEL NO:

WM6394E ESPRESSO
WM6394W WHITE
WM6394B BLACK

UPC CODE:

0-65857-16370-4 ESPRESSO
0-65857-16371-1 WHITE
0-65857-16890-7 BLACK

NOTE:

THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ AND
KEEP FOR FUTURE REFERENCE.

Lot number:

(TAKEN FROM CARTON)

Date of purchase:

_____ / _____ / _____.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.

DOREL[®]
— *Living* —



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!



CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada, H1G 3L1
E-MAIL: das@dorel.com

NOTES

- * Ensure all parts and components are present before beginning assembly.
- * Assemble on a soft, smooth surface to prevent damage to the product finish.
- * Read all instructions before use.
- * A Phillips Head screw driver is not included.
- * **DO NOT** use power tools.
- * **CAUTION:** Adult assembly required.
- * Assembly may require two people.
- * Estimated assembly time: 30 minutes.

CARE AND CLEANING

Dust regularly with a soft, lint-free cloth to prevent soil build-up. A damp cloth may be used occasionally to clean surface. Dry immediately. Do not use any abrasives that may damage finish. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.






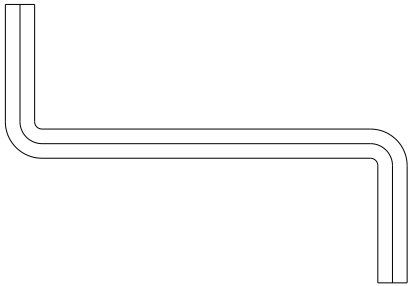



WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

TWIN WOODEN DAYBED

WM6394E / WM6394W / WM6394B

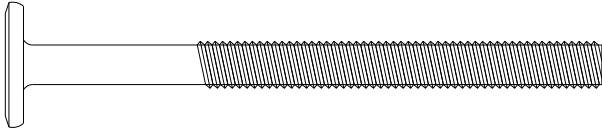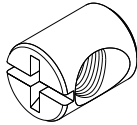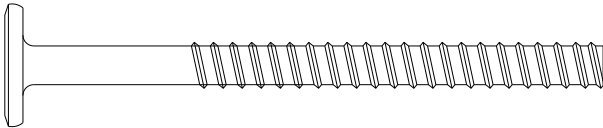





HARDWARE LIST


1	 <p style="text-align: center;">Ø1/4" X 80mm</p> <p style="text-align: center;">JOINT CONNECTOR (4mm HEX HEAD) 8 PCS</p>	2	 <p style="text-align: center;">Ø11.8mm X 15mm</p> <p style="text-align: center;">BARREL NUT 8 PCS</p>
3	 <p style="text-align: center;">Ø6.5mm X 80mm</p> <p style="text-align: center;">WOOD JOINT CONNECTOR (4mm HEX HEAD) 14 PCS</p>	4	 <p style="text-align: center;">Ø10mm X 50mm</p> <p style="text-align: center;">WOOD DOWEL 20 PCS</p>
5	 <p style="text-align: center;">Ø4mm X 35mm</p> <p style="text-align: center;">FLAT HEAD SCREW 18 PCS</p>	6	 <p style="text-align: center;">HEX KEY 1 PC</p>
7	 <p style="text-align: center;">STOPPER 25 PCS</p>		

TWIN WOODEN DAYBED

WM6394E / WM6394W / WM6394B

PARTS LIST

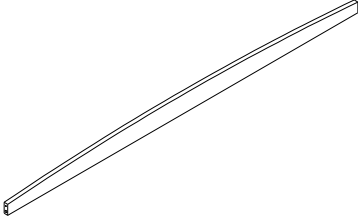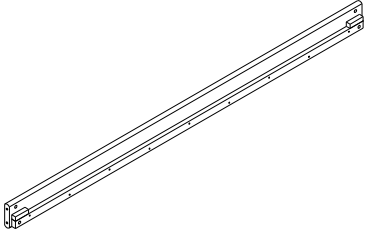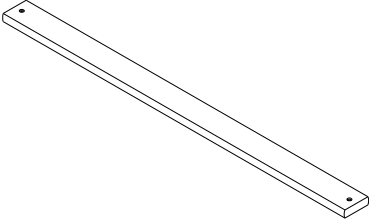




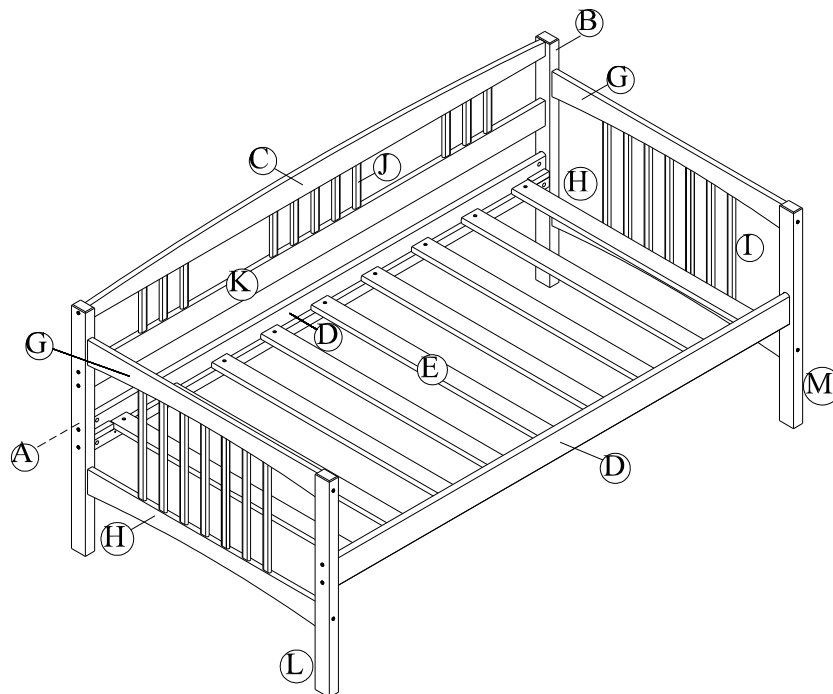

<div data-bbox="147 289 207 338" data-label="Text">A</div> 	<div data-bbox="589 289 649 338" data-label="Text">B</div> 	<div data-bbox="1031 289 1091 338" data-label="Text">C</div> 
<div data-bbox="224 688 516 779" data-label="Text"> <p>LEFT BACK POST 1 PC</p> </div>	<div data-bbox="656 688 967 779" data-label="Text"> <p>RIGHT BACK POST 1 PC</p> </div>	<div data-bbox="1110 688 1398 779" data-label="Text"> <p>TOP GUARDRAIL 1 PC</p> </div>
<div data-bbox="147 789 207 840" data-label="Text">D</div> 	<div data-bbox="589 789 649 840" data-label="Text">E</div> 	<div data-bbox="1031 789 1091 840" data-label="Text">F</div> 
<div data-bbox="201 1192 537 1283" data-label="Text"> <p>FRONT / BACK RAIL 2 PCS</p> </div>	<div data-bbox="769 1192 854 1283" data-label="Text"> <p>SLAT 9 PCS</p> </div>	<div data-bbox="1135 1192 1382 1283" data-label="Text"> <p>SPACE BLOCK 2 PCS</p> </div>



TWIN WOODEN DAYBED


WM6394E / WM6394W / WM6394B

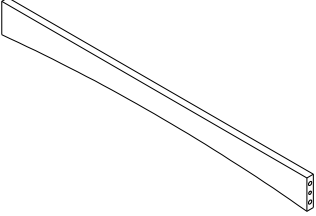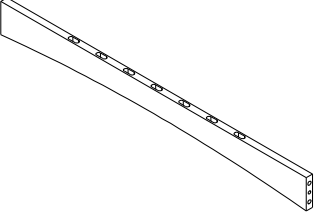PARTS LIST
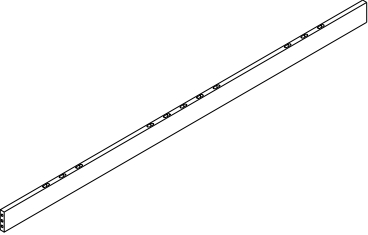
<div data-bbox="99 304 152 352" data-label="Text">G</div> 	<div data-bbox="574 304 628 352" data-label="Text">H</div> 	<div data-bbox="1068 304 1122 352" data-label="Text">I</div> 
<div data-bbox="123 720 531 821" data-label="Text"> <p>SIDE FRAME TOP RAIL 2 PCS</p> </div>	<div data-bbox="570 720 1052 821" data-label="Text"> <p>SIDE FRAME BOTTOM RAIL 2 PCS</p> </div>	<div data-bbox="1128 720 1468 821" data-label="Text"> <p>SIDE FRAME POST 14 PCS</p> </div>
<div data-bbox="99 837 152 886" data-label="Text">J</div> 	<div data-bbox="574 837 628 886" data-label="Text">K</div> 	<div data-bbox="1068 837 1122 886" data-label="Text">L</div> 
<div data-bbox="162 1253 492 1354" data-label="Text"> <p>GUARDRAIL POST 11 PCS</p> </div>	<div data-bbox="613 1253 1008 1354" data-label="Text"> <p>BOTTOM GUARDRAIL 1 PC</p> </div>	<div data-bbox="1128 1253 1468 1354" data-label="Text"> <p>LEFT FRONT POST 1 PC</p> </div>
<div data-bbox="99 1369 152 1417" data-label="Text">M</div> 		
<div data-bbox="147 1782 505 1883" data-label="Text"> <p>RIGHT FRONT POST 1 PC</p> </div>		

TWIN WOODEN DAYBED

WM6394E / WM6394W / WM6394B

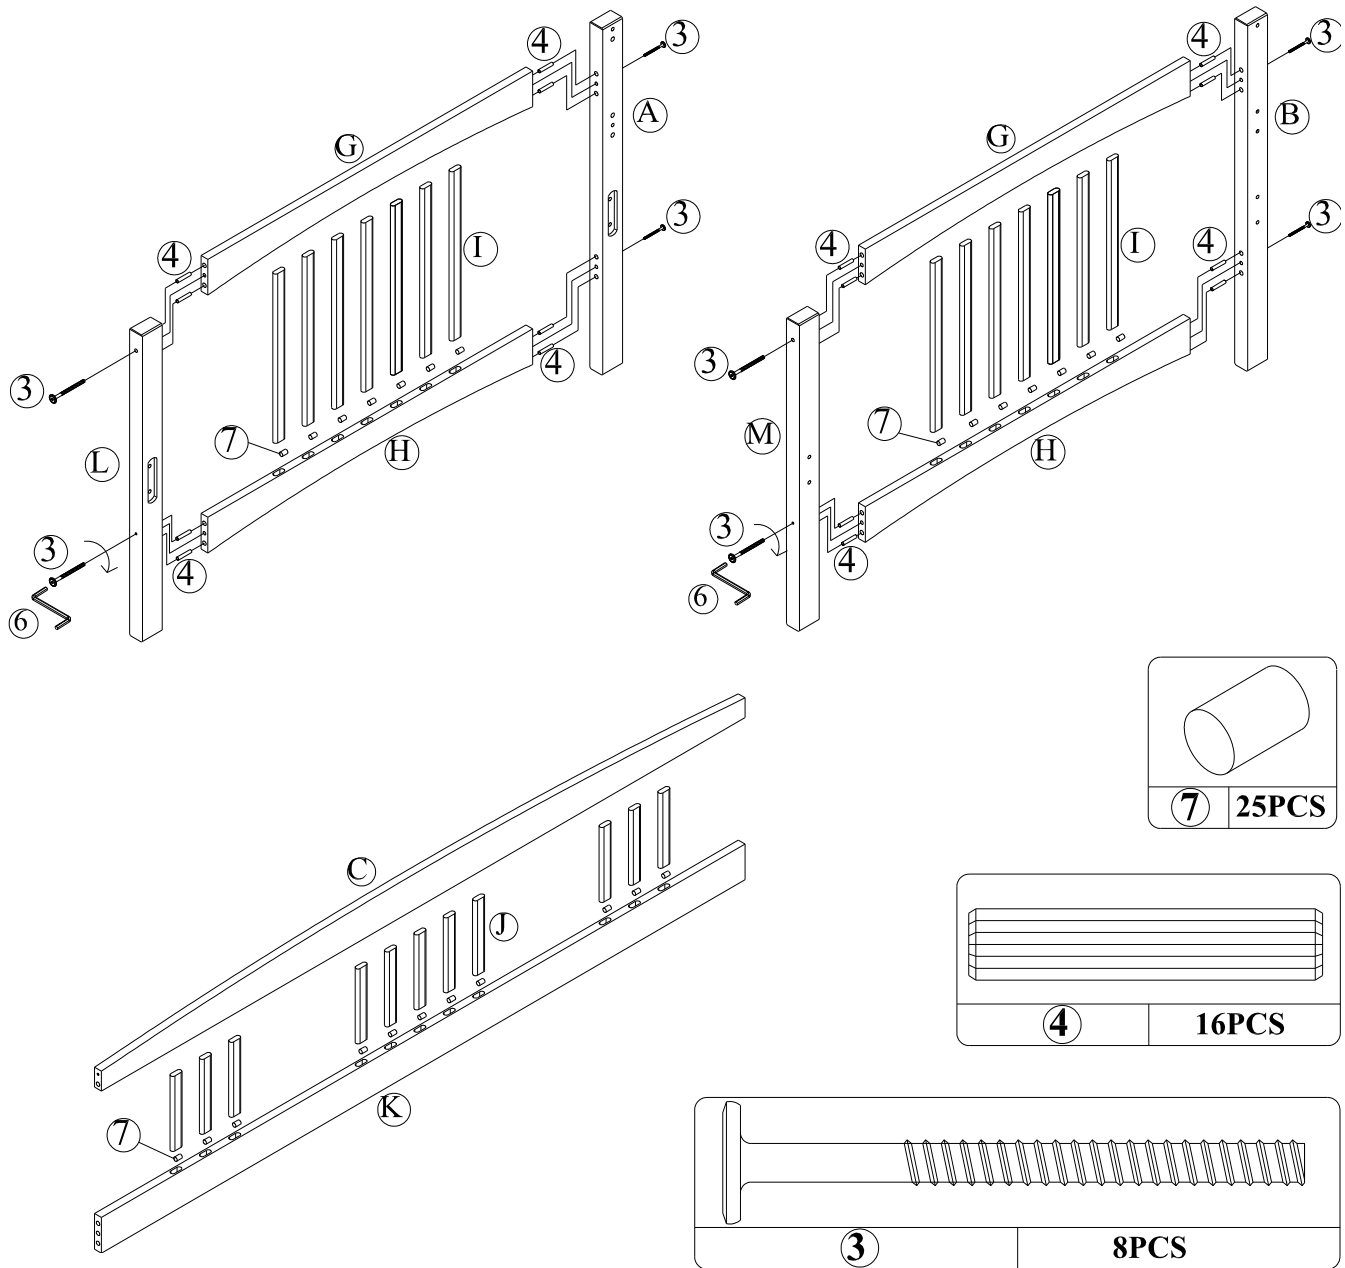

STEP 1

Insert wood dowels (4) into ends of side frame top rail (G) and side frame bottom rail (H). Insert stoppers (7) and side frame posts (I) into the side frame bottom rail (H) and push down until firmly in place. Attach the side frame top rail (G) onto the side frame posts (I).






Attach left back post (A) and left front post (L) to side frame top rail (G) and side frame bottom rail (H) with wood joint connectors (3) as shown. Use Hex key (6) to tighten wood joint connectors (3).

Repeat the previous step to assemble the other headboard with right back post (B) and right front post (M).
NOTE: Side frame top rail (G) and side frame bottom rail (H) may require that they be pulled closer together or further apart in order to allow wood dowels (4) to align with holes in posts (A & L) and (B & M).

Insert stoppers (7) and guardrail posts (J) into the bottom guardrail (K) and push down until firmly in place. Slide the top guardrail (C) onto the guardrail posts (J).

TWIN WOODEN DAYBED

WM6394E / WM6394W / WM6394B

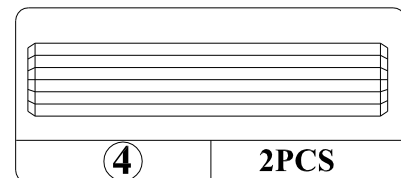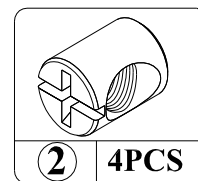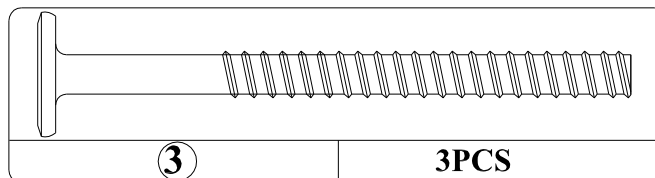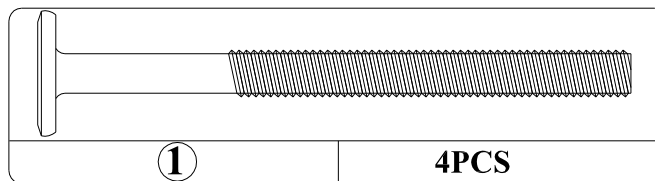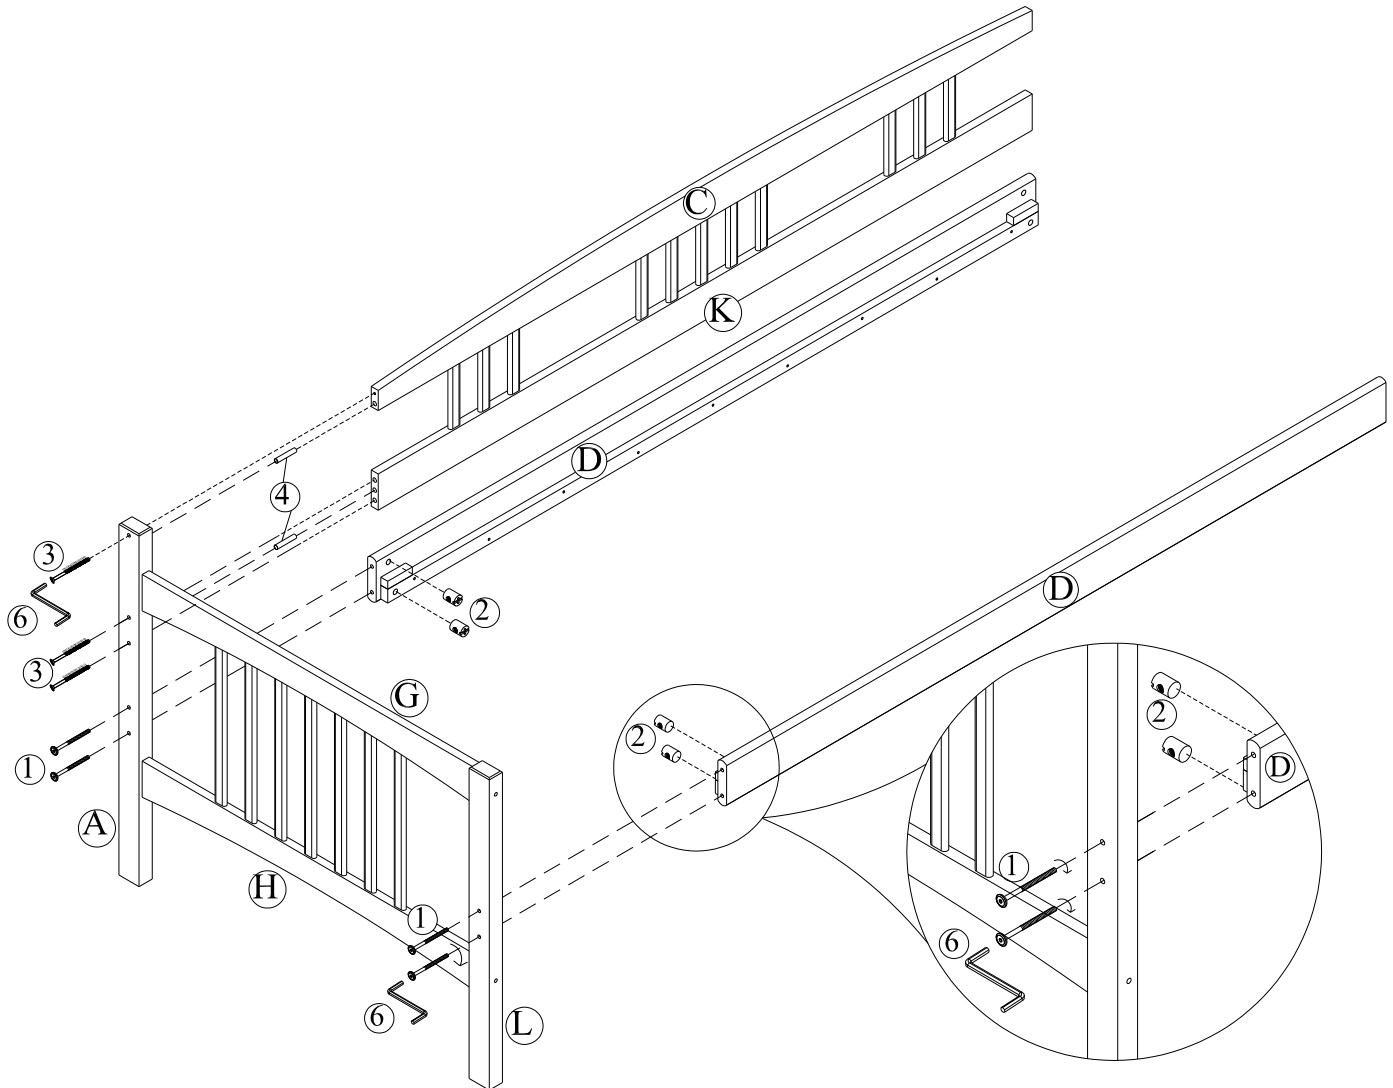

STEP 2






Insert wood dowels (4) into top/bottom guardrails (C & K) as shown. Attach top/bottom guardrails (C & K) to the left back post (A) with wood joint connectors (3). Use Hex key (6) to tighten them.

Insert barrel nuts (2) into front/back rails (D). Attach front/back rails (D) to the posts (A) and (L) with joint connectors (1). Use Hex key (6) to tighten them.

Note: Do not fully tighten the bolts. Loose bolts will facilitate assembly in the following steps.

TWIN WOODEN DAYBED

WM6394E / WM6394W / WM6394B

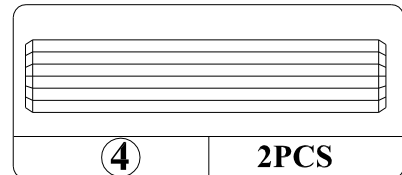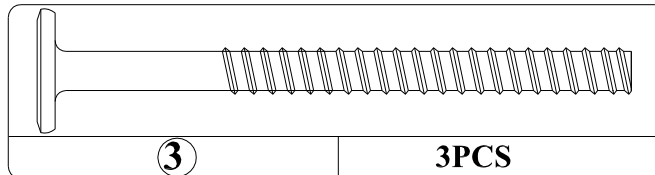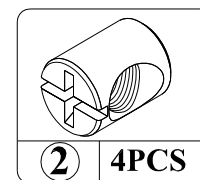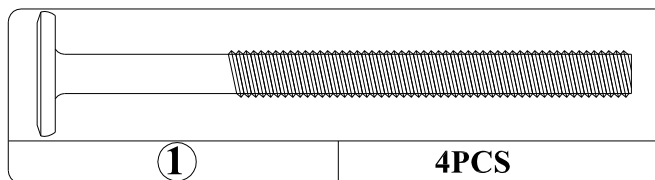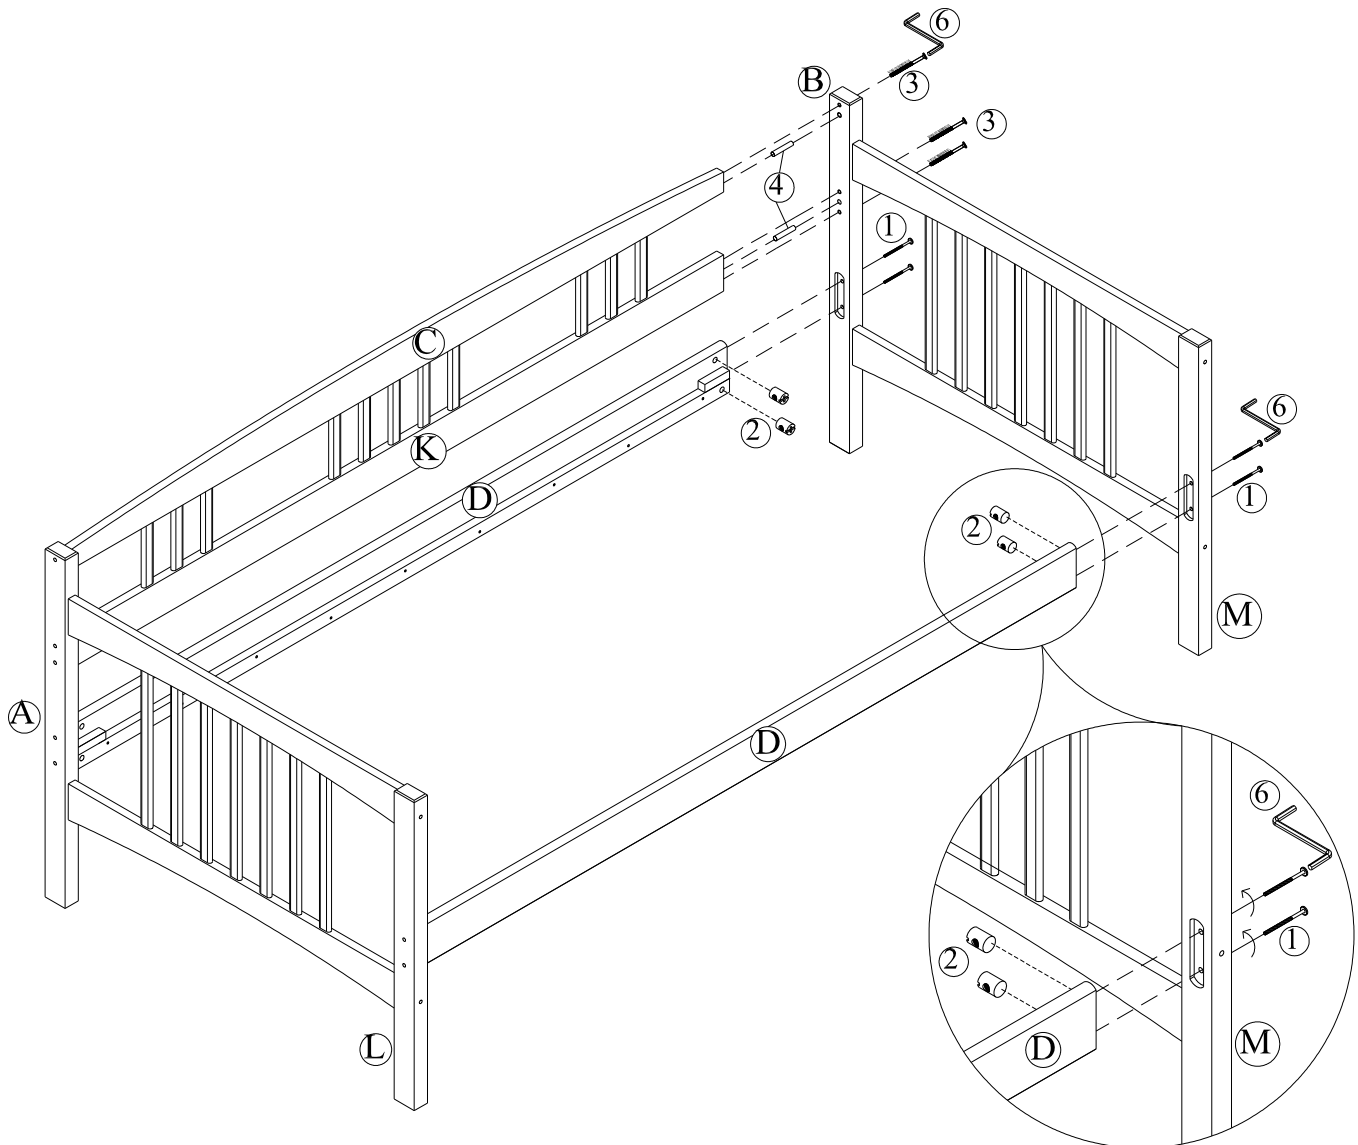



STEP 3

Insert wood dowels (4) into top/bottom guardrails (C & K) as shown. Attach top/bottom guardrails (C & K) to the right back post (B) with wood joint connectors (3).

Insert barrel nuts (2) into front/back rails (D). Attach front/back rails (D) to the posts (B & M) with joint connectors (1). Use Hex key (6) to tighten all the bolts previously installed.

TWIN WOODEN DAYBED

WM6394E / WM6394W / WM6394B

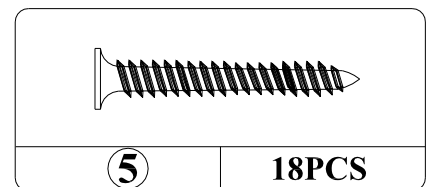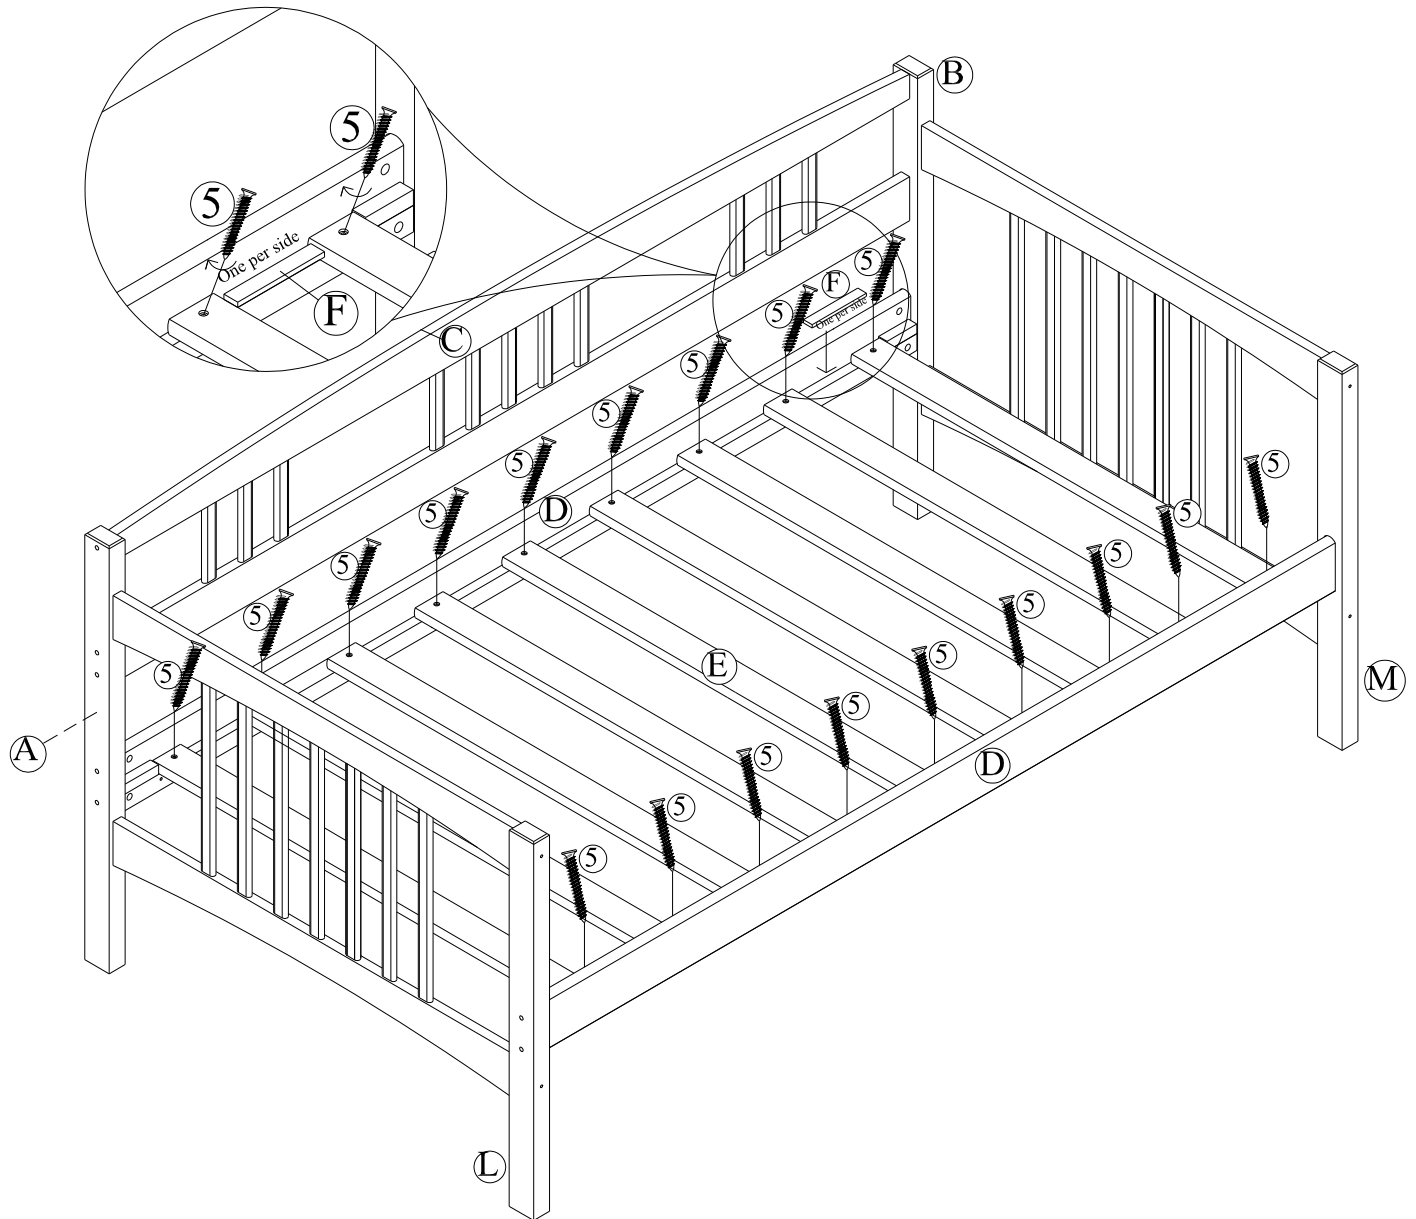

STEP 4


Attach slats (E) to front/back rails (D) with flat head screws (5). Use space blocks (F) to space them out evenly. Tighten all flat head screws (5) with a Phillips head screwdriver (not included).

TWIN WOODEN DAYBED

WM6394E / WM6394W / WM6394B



CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

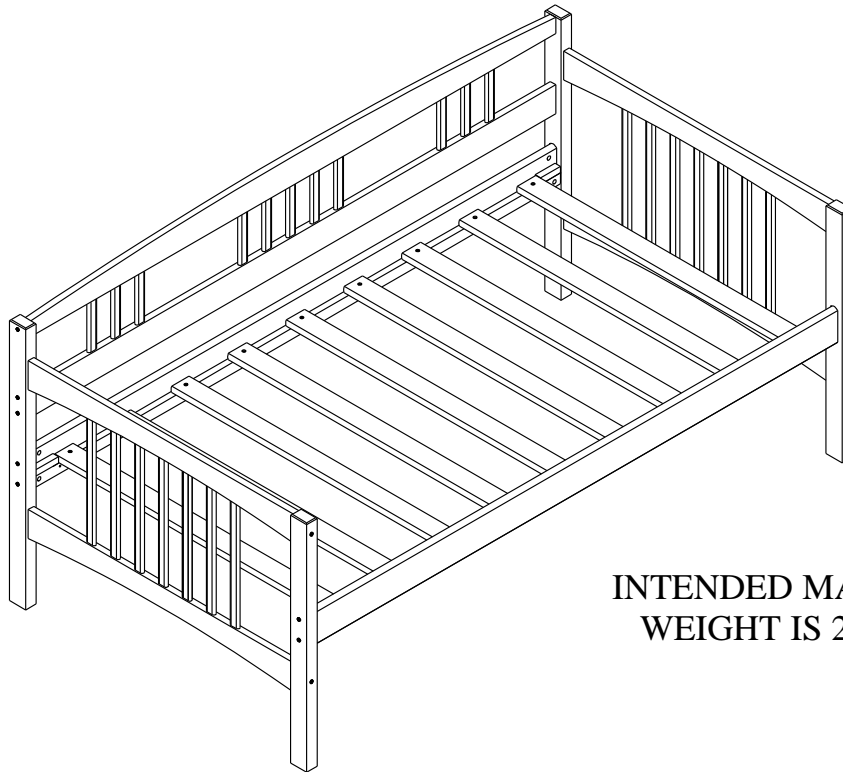

INTENDED MAXIMUM
WEIGHT IS 225 LBS

That's it ! You've finished assembling your Twin Wooden Daybed.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980	Email: das@dorel.com
Customer Service Fax Number 514-353-7819	

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:

(including area code)

Date & Place of Purchase:

Part(s) description and quantity: (Please be sure to list model number or SKN number)